



Fire Suppression Systems

Amerex SR-X Installation, Operation, and Instruction Manual

P/N 19125 – #5403553 Rev. C – January 2010



SR-X Suppression Release Panel

(All specifications subject to revision.)

AMEREX CORPORATION
7595 GADSDEN HIGHWAY—TRUSSVILLE, AL 35173

TABLE OF CONTENTS

Installation Precautions	5
Design Guidelines	6
General Description	6
System Features	6
Options	8
Specifications	9
SR-X Visual Indicators.....	9
LCD	9
SR-X Visual Indicators	9
Control Buttons.....	10
Circuit Parameters (All voltages regulated DC) - Initiating Device Circuits	10
Dedicated Supervisory Zone	10
Notification/Release Circuits.....	10
Release Abort Circuit.....	11
Low/Missing Battery	11
Input Power	12
Backup Power Requirements	12
Service Use	12
Listings and Approvals.....	12
Terminals	12
Relay Outputs.....	12
Auxiliary Power.....	12
Annunciator Connection	12
Optional Accessories	12
Basic Operation	13
Low Air Alarm.....	13
Supervisory.....	13
Trouble Conditions	14
Initiating Device Circuits	14
Notification Appliance/Releasing Circuits	14
Ground Fault.....	14
Loss or Reduction of AC Power.....	15
Low Battery Voltage.....	15
Loss Of Auxiliary Power Output.....	15
To Silence the Buzzer (or outputs that have been described as trouble or supervisory bell)	15
To Silence a Signaling Appliance.....	15
To Reset an Alarm or Supervisory Condition.....	15
To Reset A Trouble Condition	16
Lamp Test	16
Remote Annunciator Model RA-4410RC Operation	16
Test Procedure	16
Programming Mode Instructions.....	17
Panel Visual Display.....	17
Maintenance	17
History	18
Date and Time	18
Password.....	19
Zone Disabled/Enabled	19
Output Enable/Disable.....	19
One Man Walktest	20

Amerex SR-X Standard Program Information 21

Wiring Diagram Program #1 22

Wiring Diagram Program #2 24

Wiring Diagram Program #3 26

Wiring Diagram Program #4 28

Wiring Diagram Program #5 30

Wiring Diagram Program #6 32

Wiring Diagram Program #7 34

Wiring Diagram Program #8 36

Wiring Diagram Program #9 38

SR-X Custom Programming Information 40

Amerex SR-X panel Custom Program Information for Water Based Extinguishing Systems 41

Initiating Zone Description 41

Output Description 42

Normal/Cross-Zoning 43

Releasing Output Time 43

Custom Message 44

Amerex SR-X panel Custom Program Information For Chemical Based Extinguishing Systems 45

Initiating Zone Description 45

Output Description 46

First Or Second Alarm 47

Normal/Cross-Zoning 47

Pre-Discharge timer for MANUAL RELEASE zones 48

Abort Modes 49

Releasing Output Time 49

Installation Instructions 52

Wire checkout 52

Mounting Instructions 53

Power Compatibility 54

Inactive Circuits 54

Operating Instructions Form 54

Battery Size Calculations 54

Battery Size Requirements And Maintenance 54

Current Requirements: Table 1 55

Secondary Power Supply Requirements: Table 2 55

Calculation Table 55

2-Wire Smoke Detector Compatibility Data 56

Releasing Device Capability 57

NAC Device Compatibility 57

Wire Routing for SR-X panel 59

NEC Section 760-54 60

Connection Procedure for Battery Charging Current and Voltage 61

Installation of Bezel for Semi-Flush Installations 61

Annex A: 4-Wire Smoke Detectors/Devices 62

Installation Precautions



This is the safety alert system. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

The detection and suppression system employing this release panel must be designed by people trained and competent in the design and layout of fire alarm and/or systems for special hazard locations. The system shall be designed and installed in accordance with all local and national codes and ordinances as well as the approval of the authority having jurisdiction. Only trained, qualified and competent individuals should install, program and/or service the SR-X panel. Competent people would be aware of these warnings, limitations, and requirements.

The abort circuit will not abort the release or stop the pre-discharge timer activated by zones programmed as MANUAL RELEASE. If it is desired to have the abort circuit stop the release activated from a manual release zone, program that zone as a DETECTION zone instead.

High Voltage Electrocutation Hazard. Do not handle live AC wiring or work on the device while AC power is active.

This manual is designed to help with the specification, installation, and programming of the SR-X panel. It is imperative that this manual be completely read and understood before the installation or programming of the panel. Save this manual for future reference.

Zones programmed as manual release will override any cross zoning features. If it is desired to not have a manual station override the cross zoning, program the zone as detection and map accordingly.

Per ULC requirements; if this equipment is running on battery power only, it will shut off and cease to operate when the battery voltage reaches approximately 19-20 Volts.

CAUTION

Locate the panel and all system components in the following nominal environment:

- Temperature 32-120°F, humidity 93% non-condensing.
- Verify that the wire sizes are adequate for all initiating, notification, and release circuits.
- Make certain the panel is properly grounded.
- Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible make all cable entries from the sides, bottom or rear of the cabinet. Verify that they will not interfere with the batteries or other components.
- The panel and system must be tested and maintained in accordance with all local and national codes and ordinances.

NOTICE

Operating Instructions Form

Fill in the name, address and telephone number of the servicing agency on the instruction sheet provided and frame and place adjacent to control panel at eye level.

The following documentation shall be delivered to the owner or their representative upon final acceptance of the system:

- An owners manual and installation instructions covering all system equipment.
- Wiring diagrams
- A detailed description of the programming and operating sequence of the system

WARNING

Fire Alarm System Limitations

Smoke detectors may not detect smoke when the smoke does not reach the detector. Such as smoke within walls, on the other side of walls, on other floors, behind closed doors, explosions, etc. Smoke detectors will not operate if they are not properly connected to the fire/release panel. The detectors and bases must be UL listed as being compatible with the panel. The detectors have a visible flashing light that indicates power is supplied to the detectors.

Notification appliances may not alert people if the people are not able to hear or see the appliances such as if they are in separate areas of the building or room.

A fire alarm/release panel will not operate without electrical power. The panel must have sufficient backup battery capability to power the panel for a specified amount of time in the event of an AC power failure. The batteries and release panel shall be tested and maintained in accordance with the testing and maintenance requirements of NFPA 72.

In order for emergency forces, (Fire departments, etc.), to respond to events associated with this panel, the panel must transmit trouble, supervisory, and alarm signals to a monitoring facility either directly or through a main building fire panel.

A problem in an audible or visual device may not be apparent when the panel is in a normal condition.

Design Guidelines

People trained in the design of special hazard systems shall determine the selection and placement of the initiating devices and notification appliances connected to the Amerex SR-X panel. This responsible party shall also be familiar with the premises being protected.

The equipment shall be installed in accordance with the manufacturers instructions, the applicable version of NFPA 72 and all local codes and ordinances. For systems employing cross zoning of two smoke detectors for the activation of the release circuit, this can include but is not limited to the installation of photoelectric and ionization types of detectors on separate zones. One of each type of detector on separate zones shall be installed in the coverage area selected for a single detector (not to exceed 0.7 times the linear spacing). The detectors would be installed in close proximity to each other.

The responsible party shall also determine the theory of operation regarding the programming sequence.

NOTICE TO ALL USERS, INSTALLERS, AHJ'S, AND OTHER INVOLVED PARTIES

This product incorporates field programmable software. In order to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, certain programming features or options must be limited to specific values or not used at all, as indicated below.

Program Feature or Option	Permitted in UL 864	Possible Settings	Settings Permitted in UL 864
NY Abort (Mode 3)	No	Mode 1, 2, 3, or 4	Modes 1 and 2
30-Second Abort (Mode 4)	No	Mode 1, 2, 3, or 4	
Abort on Pre-action or Deluge Systems	No	Supervisory, Tamper, Low air, High Air, Abort	Supervisory, Tamper, Low Air, High Air

General Description

The SR-X panel (Amerex P/N 19340) is a listed and approved, microprocessor based fire control/releasing panel. It is primarily designed for use as a releasing panel for agent extinguishing systems or for agent extinguishing systems. The SR-X panel may also be used as a stand alone fire control panel. This unit complies with NFPA-12, NFPA-12A, NFPA-13, NFPA-15, NFPA-16, NFPA-17, NFPA-17A, NFPA-72, NFPA-750, NFPA-2001.

The SR-X panel complies with UL Standard 864, ULC S527-99, Canadian Electrical Code Part 1 C22.1., ULC S524, FM, CSFM and NYMEA.

System Features

- Four Class B (Style B) Initiating zones. Each initiating zone can be set up for any of the following:
 - **Alarm Zones**
 - Detection alarm zone
 - Waterflow
 - Linear Heat Detection (700 ohms per zone.)
 - Manual Release

- **Supervisory Zones**

- Supervisory
- Tamper
- Low Air Supervisory
- High Air
- Low Air Alarm

NOTE: Only zones programmed as Detection, Waterflow, Linear Heat, Manual Release, and Low Air Alarm can be mapped to outputs programmed as release.

- Remote Annunciator Output for connection to RA-4410RC:
 - RS-485 communication, (2-wire shielded cable required)
 - Regulated 24VDC annunciator power
- Two Supervisory Zones, Class B (Style B). This zone can be set up for any of the following:
 - Supervisory
 - Tamper
 - Low Air Supervisory
 - High Air
 - * Abort (Supervisory zone 1 only)

NOTE: * Abort on a water-based extinguishing system is not a UL Listed function.
- Four Class B (Style Y) Output circuits. Each output can be set up for any of the following:
 - Notification Appliance circuit, (First or Second alarm notification in chemical extinguishing mode as well as On for the First Alarm, Off for the Second; On for Alarm, Off during a Pre-Discharge and On again during a Discharge; 1-second-on/1-second-off Pulse for an Alarm, On for a Pre-Discharge and Off for a Discharge; On during a Discharge; 1-second-on/1-second-off Pulse for Alarm and On for a Discharge; On for Alarm, Off for a Discharge.)
 - Releasing circuit
 - Supervisory Bell circuit
 - Trouble Bell circuit
- One Abort Circuit (Available in Chemical Mode only) Programmable for four different operating modes
 - ULI – Stops the pre-discharge timer at 10 seconds
 - IRI – Abort must be activated before the second alarm is received
 - NYC (not UL listed) A one time operation that adds 90 seconds to the remaining pre-discharge time
 - 30-Second Abort (not UL listed)– stops or reverts the pre-discharge timer at 30 seconds



- Nine Standard Programs for Chemical (Agent) based systems or custom program capability
- User selectable between Water Based or Chemical Based
- Releasing Zones can be set up for either normal or cross zoning operation
- All circuits inherently power limited per NEC 760 and UL 864 Section 14.4
- Initiating Circuit Disable feature
- Output Disable feature
- One-Man Walktest feature with automatic 30 minute restoration and releasing circuit disable
- Class B (Style B) Abort circuit available in Chemical mode. Three Abort modes available
- Pre-Discharge timer from 0-60 seconds available in Chemical mode only
- Manual Release 0-30 seconds pre-discharge timer in Chemical Mode only
- Notification Appliance Circuits can be programmed to operate upon First or Second alarm notification in chemical extinguishing mode as well as On for the First Alarm, Off for the Second; On for Alarm, Off during a Pre-Discharge and On again during a Discharge; 1-second-on/1-second-off Pulse for an Alarm, On for a Pre-Discharge and Off for a Discharge; On during a Discharge; 1-second-on/1-second-off Pulse for Alarm and On for a Discharge; On for Alarm, Off for a Discharge.

- Diagnostic Indicators
- Signal Silence button
- Buzzer Silence button
- Manual event scroll buttons
- Automatic resound of silenced trouble signals after 24 hours
- Built-in Trouble buzzer
- Common Contacts for Alarm/Trouble/Supervisory/Waterflow
- 32 Character Liquid Crystal Display (LCD)
- 34 LED display
- User Generated Banner Message
- User Generated Zone Labeling
- 24 or 90 hour Battery Standby available (Where required by FM and Others)
- 24 Hour Clock
- Password Protection
- Remote annunciator output
- 4-Wire resettable smoke detector power

Options (Manufactured by Potter)

1. CAM - Module to convert one Class B Indicating Appliance Circuit to one Class A circuit.
2. CA2Z - Module to convert two Class B Initiating Device Circuits to two Class A circuits.
3. ARM-2 - Module to provide two Form C contacts activated by Indicating or Releasing, polarity reversing circuits.
4. ARM-44 - Module to provide 8 Form C contacts activated by corresponding initiating zones and outputs.
5. RA-4410RC – Remote annunciator provides 34 LED's for each zone in alarm supervisory or trouble, each output activated or in trouble, AC power, Power trouble, System trouble, Ground fault, Supervisory, Supervisory trouble, Alarm, Alarm silence and Pre-discharge/Discharging. The annunciator also has a lamp test switch.
6. Abort switch
7. RCDS-1 – Releasing Circuit Disconnect Switch

 **WARNING**

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Specifications

Amerex SR-X panel

Type - 18 gauge sheet steel with hinged, removable, locked door

Size - 18 1/2" x 14 1/4" x 4 3/4"

Finish - Red cabinet with red on black logo.

Knockouts - Left side: one 1/2" and one 3/4"
 Right side: two 3/4" and one 1/2"
 Top side: four 1/2" and two 3/4"
 Back side: two 1/2" and one 3/4"

Option - Bezel for semi-flush mounting

SR-X Visual Indicators

LED Indicators (red = alarm)

32 Character Alpha-Numeric Liquid Crystal Display (LCD)

LCD

A 2 line 32 character alpha-numeric liquid crystal display shows the condition, status and circuit for all Alarm, Supervisory and Trouble conditions.

CONDITION	STATUS	CIRCUIT
Alarm	Silenced	<user Defined Message> (Up To 10 Characters)
Trouble	Disabled	Output #1
Supervisory	Acknowledged	Output #2
Tamper		Output #3
Low Air		Output #4
High Air		Battery
Aborted		A.C.
Pre-discharging		Supervisory
Releasing		Zone #1
Released		Zone #2
		Zone #3
		Zone #4
		Ground

SR-X Visual Indicators

In accordance with ULC S527-99 option B:

LED Annunciator Module

Red LED's: Initiating Device Circuits Active (4),
 Notification/Release Circuits Active (4)
 Common Alarm (1)

Green LED: AC Power

Yellow LED's: Initiating Device Circuits Troubles (4),
 Output Circuits Troubles (4)
 Supervisory Initiating Zone (4)
 Supervisory Bell Output Active (4)

(1) each: Supervisory 1, Supervisory 2, Power Trouble, Supervisory Trouble, System Trouble, Ground Fault, Pre-Discharge/Discharging, Alarm Silenced

CONDITION	STATUS	LED State
Trouble	Non-Silenced	Flashing
Trouble	Silenced	Steady ON
Alarm	Non-Silenced	Flashing
Alarm	Silenced	Steady ON
Supervisory	Non-Silenced	Flashing
Supervisory	Silenced	Steady ON
Pre-discharge		Flashing
Discharging		Steady ON

Control Buttons

- Signal Silence - Momentary, silences signaling circuits, (except those activated by zones programmed as WATERFLOW)
- System Reset - Momentary, resets all alarm circuits if condition has been corrected, removes power from initiating device circuits.
- Scroll Up - Scrolls LCD display to most recent events
- Scroll Down - Scrolls LCD display to previous events

NOTE: Buzzer silence is accomplished by scrolling through all events.

Circuit Parameters (All voltages regulated DC) - Initiating Device Circuits

Initiating Device Zones: For connection of dry contact initiating devices and compatible 2 wire smoke detectors. (All values nominal)

- 4 Class B, Style B (Class A Style D module available)
- Power limited, current limited to protect 2 wire smoke detectors
- Maximum 2 wire 24VDC smoke detector load per zone - 2.5 mA (Use only detectors that are listed in compatibility list.)
- Maximum Line resistance - 100 ohms (Except linear heat detection cable, 700 ohms per zone)
- End-of-Line Resistance - 5.1K ohm
- Normal standby current - approximately 4.0 mA
- Standby voltage - 25VDC maximum, 13.4 minimum
- Maximum short circuit current - approximately 36mA
- Maximum Impedance for Alarm - 1400 ohms
- Normal supervisory current - approximately 4mA
- Low current trouble activation - approximately 3.3mA
- Alarm activation current - approximately 10mA
- Ripple voltage - .4VDC
- Maximum operating voltage range: 22.5 - 25.9VDC
- Frequency - continuous

Dedicated Supervisory Zone

- For dry contact supervisory devices such as tamper, low air, or high air switches
- 2 Class B Style B circuit, latching
- Power limited, current limited
- End-of-Line resistance - 5.1K ohms
- Ripple Voltage - .1VDC
- Frequency - continuous
- Maximum voltage - 25VDC
- Maximum short circuit current - approximately 36mA
- Maximum line resistance - 100 ohms
- Normal supervisory current - approximately 4mA
- Low current trouble activation - approximately 3.3mA
- Supervisory current condition - approximately 10mA

Notification/Release Circuits

The indicating circuits of the Amerex SR-X panel are Non-coded. This allows the use of visual and audible appliances on the same circuit. If temporal notification appliances are required for evacuation, selectable tone appliances such as the AMSECO H24WR horn or SH24W Series strobe/horns or a temporal module such as AMSECO TMP1-3A or equivalents shall be used.

The notification outputs do not provide synchronization. See table for sync options and devices on page 57. The notification appliances shall be compatible with the sync module selected. The sync' module shall be installed as per manufacturers instructions. Synchronization is limited to only one circuit and not between circuits. Systems intended for the release of Halon 1301 as described in NFPA 12A, or clean agents as described in NFPA 2001, shall have provision for a pre-discharge notification circuit. If the signal is required to be separate and/or distinct from the evacuation signal, two notification circuits are required. One shall be programmed as FIRST ALARM. It will provide a steady output upon activation of any initiating zone programmed as an alarm zone. This is the evacuation signal. If a temporal signal is required, notification appliances such as AMSECO model H24WR or others that can produce a temporal tone shall be used. This allows the use of strobes and horns on the same circuit. The other notification circuit shall be programmed as SECOND ALARM. It will provide a steady output upon activation of a second initiating zone programmed as an

alarm zone. This is when the pre-discharge timer would start and would be the pre-discharge signal. If a temporal or other type of signal is required, notification appliances such as AMSECO model H24WR or equivalent shall be used. This allows the use of strobes and horns on the same circuit. If a separate signal for discharge were required, a third notification circuit would be used that would be programmed to operate whenever the release circuit is activated.

- 4 Class B Style Y (Class A Style Z module available for notification)
- Reverse polarity upon activation
- Power limited, Current limited
- 24VDC Special Application, rated 1 amp each, 2.5 amps total for all 4 circuits
- End-of-Line-Resistor - 5.1k ohms
- Frequency - continuous
- Maximum voltage - 27VDC
- Ripple voltage - .3VDC
- Maximum resistance for outputs programmed as RELEASING:
1 divided by the current draw of the solenoid when activated
- Normal standby supervisory current - approximately .38mA
- Low current trouble activation - .11mA
- High current trouble activation - .63mA
- Maximum impedance - 5 ohms

Release Abort Circuit

- Available chemical mode only
- 1 momentary non-latching Class B Style B circuit
- Power limited, current limited
- Maximum loop resistance - 100 ohms
- End-of-Line-resistance - 5.1k ohms
- Frequency - continuous
- Normal supervisory current - approximately 4mA
- Low current trouble activation - approximately 3.3mA
- Abort current condition - approximately 10mA
- Maximum voltage - 23VDC

NOTE: Modes 3 and 4 are not UL Listed

Mode 1 – (ULI) Activation of the abort circuit stops the pre-discharge timer at 10 seconds. If there is less than 10 seconds remaining, the time goes back to 10 seconds. Releasing the abort switch starts the timer at 10 seconds.

Mode 2 – (IRI) Operates the same as the ULI mode except the abort circuit only functions if the abort button is pressed before the second alarm is received by the panel. The panel must be programmed for cross zoning for the IRI mode to function.

Mode 3 – (NYC) This mode is not UL listed. Activation of the abort circuit during the pre-discharge countdown adds 90 seconds to the original pre-discharge time. This is a one-time feature. Repeated pressing of the abort button has no effect. The pre-discharge timer resumes when the abort button is released.

Mode 4 – (30-Second Abort) This mode is not UL listed. Activation of the abort circuit stops the pre-discharge timer at 30 seconds. If there is less than 30 seconds remaining, the timer goes back to 30 seconds. Releasing the abort switch starts the timer at 30 seconds.

CAUTION

Zones programmed as Manual Release cannot be aborted. If it is necessary to abort a manual station zone, program that zone as Detection.

If the pre-discharge timer is set at 0 the abort circuit will not stop the release circuit.

NFPA 12 prohibits the use of abort circuits on Suppression Systems employing carbon dioxide.

Low/Missing Battery

Causes battery and system trouble if battery falls below 22 volts. Battery circuit is fused and reverse polarity protection is provided.

Input Power

- Universal Input 120VAC, (60 Hz, 165VA) or 220VAC, (50/60 Hz, 185VA) 15 Amp Branch Line over current protection required
- AC Power indicator on LED annunciator module goes off on AC power loss (supervised)
- System trouble is also generated if voltage drops below 102V
- Supervised

Backup Power Requirements

- SR-X panel - Standby 121 mA, alarm 274 mA at 24VDC

Service Use

NFPA 12 – Carbon Dioxide systems

NFPA 12A – Halon 1301 fire systems

NFPA 13 - Automatic Sprinkler

NFPA 15 - Water Spray Fixed System

NFPA 16 - Foam Water Sprinkler and Foam Water Spray

NFPA 17 - Dry Chemical

NFPA 17A - Wet Chemical

NFPA 72 - National Fire Alarm Code

- Local
- Remote Station (protected premise unit)
- Central Station (protected premise unit)

NFPA 750 - Water Mist

NFPA 2001 - Clean Agent Fire Extinguishing System

Listings and Approvals

SR-X PN19340 - UL Standard 864, ULC Standard S527, FM, CSFM and NYMEA

Terminals

- All terminals capable of #22 - #14 AWG wire
- All terminations have transient protection
- All four initiating device circuit terminals capable of handling linear heat detection.

Relay Outputs

- Common system alarm contacts SPDT rated 3 Amps, 30VDC resistive
- Common supervisory contacts SPST, N.O. rated 3 Amps, 30VDC resistive
- Common system trouble contacts SPDT rated 3 Amps, 30VDC resistive
- Common waterflow contacts, SPST, N.O. rated 3 Amps, 30VDC resistive
- Circuits connected to relays should be connected within the same room

Auxiliary Power

- Auxiliary Power - 24VDC special application. Rated 200 mA max. Power limited, current limited, non-supervised
- Resettable for 4-wire smoke detectors, see Annex A for device compatibility.

Annunciator Connection

- Auxiliary Power - 24VDC regulated. Rated 200 mA max. Power limited, current limited, supervised for RA-4410RC Annunciator
- RS-485 For connection to RA-4410RC remote annunciator
- Maximum 2000' with 22 AWG, 4000' with 20 AWG wire

Optional Accessories

CA2Z MODULE (Class A initiating device circuit):

Converts two Class B initiating device circuits to two Class A circuits.

CAM Module (Class A Notification Appliance Circuit):

Converts indicating appliance circuit from Class B to Class A. One model CAM (Class A Module) is required for each circuit. (Do not use this on an output programmed as "Trouble Bell".)

ARM-1/ARM-2 Module (Auxiliary Relay Module)

Activated by 24VDC Indicating and/or Releasing, polarity reversing circuits. The module provides a non-supervised DPDT Relay that can be used for fan shutdown, door release, elevator recall, etc.

RA-4410RC (Remote Annunciator)

Connects to RS-485 & 24VDC terminals. Provides 34 LED's for each zone in alarm supervisory, or trouble, each output activated or in trouble, AC power, Power trouble, System trouble, Ground fault, Supervisory, Supervisory trouble, Alarm, Alarm silence and Pre-discharge/Discharging.

The annunciator also has a lamp test switch.

ARM-44 (Relay Module) - Relay installs in a cabinet and provides 8 relays. 4 relays mapped to inputs and 4 relays mapped to the outputs in a 1 to 1 relationship selectable disable switch.

RCDS-1 (Releasing Circuit Disconnect Switch) - Key switch with LED indicators that opens releasing circuit for service and testing.

Basic Operation

In addition to the following events, the panel also provides an output via the RS-485 terminals to the RA-4410RC remote annunciator to light the appropriate indicators. See remote annunciator operations, page 16.

Initiating Device Circuits Alarm Condition:

An increase of current on any alarm initiating device circuit to approximately 10 mA or greater will result in the following: ALARM, (Except zones programmed as LOW AIR ALARM):

1. Activation of the alarm relay contacts.
2. Activation of the output circuit(s) which are mapped to the initiating device circuit(s). Providing all zone(s) necessary for the activation of those circuits is in alarm
3. "ALARM" and zone # displayed on LCD.
4. "PRE-DISCHARGE" displayed on LCD if zone(s) in alarm activated pre-discharge timer (In chemical mode only).
5. Activation of red ZONE indicator(s) on LED display for the initiating device circuit(s).
6. Activation of red ALARM indicator on LED display.
7. Activation of red OUTPUT indicator(s) on LED display module for the output circuit(s) which are mapped to the initiating device circuit(s).
8. Activation of flashing red PRE-DISCHARGE indicator on LED display if in chemical mode and pre-discharge timer was activated by zone(s) in alarm. Providing all zone(s) necessary for the activation of those circuits is in alarm.



When in Chemical Extinguishing mode, the release circuit(s), are not activated until the pre-discharge timer expires, if a pre-discharge time was programmed. The pre-discharge time defaults to 30 seconds for Manual Release and 60 seconds for all other alarm tones.

Low Air Alarm

1. Operation of supervisory relay contacts and local buzzer.
2. Activation of the notification appliance circuit(s) or releasing circuit(s) which are mapped to the initiating device circuit(s). Providing all zone(s) necessary for the activation of those circuits is in alarm.
3. LOW AIR ALARM and <CIRCUIT #> displayed on LCD.
4. Activation of yellow ZONE indicator on LED annunciator module for the initiating device circuit.
5. Activation of yellow ZONE indicator(s) on LED annunciator module for the initiating device circuit(s) described as "LOW AIR ALARM".
6. Activation of yellow OUTPUT indicator(s) on LED annunciator module for the output circuit(s) which are mapped to the zone. Providing all zone(s) necessary for the activation of those circuits are in alarm.

Supervisory

An increase of current to approximately 8 mA or greater on the supervisory initiating device circuit(s) or disabling an output programmed as releasing will result in the following:

1. Operation of supervisory relay contacts and local buzzer.

2. Operation of any output circuits that have been described as SUPERVISORY BELL.
3. "SUPERVISORY", "TAMPER", "LOW AIR", or "HIGH AIR" and <CIRCUIT> displayed on LCD.
4. Activation of yellow SUPERVISORY indicator on LED display.
5. Activation of yellow ZONE indicator(s) on LED display for the initiating device circuit(s) described as "SUPERVISORY", "TAMPER", "LOW AIR SUPERVISORY", or "HIGH AIR".
6. Activation of yellow OUTPUT indicator(s) on LED display for the Notification appliance circuit(s) described as SUPERVISORY BELL.

Trouble Conditions

In custom program mode, failure to map at least 1 zone to every output or only mapping 1 zone to a release output programmed as cross zoned will cause a system trouble. The display will read: TROUBLE NO OUTPUTS.

Initiating Device Circuits

A decrease of current to approximately 3.3 mA or programming the zone as disabled on any initiating device circuit will result in the following:

1. Activation of trouble relay contacts, trouble LED and local buzzer.
2. Operation of any output circuits which have been described as TROUBLE BELL.
3. "TROUBLE" and <CIRCUIT> displayed on LCD.
4. Activation of yellow ZONE indicator(s) on LED annunciator module for the initiating device circuit(s).
5. Activation of yellow SYSTEM TROUBLE indicator on LED annunciator module.
6. Activation of yellow OUTPUT indicator(s) on LED annunciator module of any output circuit(s) which have been described as TROUBLE BELL.
7. Activation of the amber TROUBLE LED in a flashing mode. NOTE: The TROUBLE LED will continue to flash until all events in the TROUBLE queue are viewed. This is accomplished by scrolling through all of the events by use of the scroll up and scroll down buttons. The LED will go steady after all trouble events have been viewed.

NOTE: When the circuits are operated in the Class A mode any trouble condition will require manual operation of the reset switch to restore the panel to normal after the fault has been removed.

A complete loss of power will result in the transfer of the common system trouble relay contacts.

Notification Appliance/Releasing Circuits

An increase of current to approximately 0.63 mA or a decrease in current to approximately 0.11 mA on any output circuit or connecting an indicating appliance backwards, or disabling an output will result in the following:

1. Activation of trouble relay contacts, trouble LED and local buzzer.
2. Operation of any output circuits which have been described as TROUBLE BELL. If this output is in trouble, a TROUBLE BELL on this output may not function correctly, depending on the type of trouble.
3. "TROUBLE" and "OUTPUT #" <CIRCUIT NO.> displayed on LCD.
4. Activation of yellow OUTPUT indicator(s) on LED display for the notification appliance(s).
5. Activation of yellow SYSTEM TROUBLE indicator on LED display.
6. Activation of yellow OUTPUT indicator(s) on LED display of any output circuit(s) which have been described as TROUBLE BELL.

NOTE: A current in excess of 1.5 Amps, when the panel is in the alarm condition, will result in that output being disabled and a trouble as described above.

CAUTION

A problem in an audible or visual device may not be apparent when the panel is in a normal condition. If the circuit indicates a trouble condition when the panel is in an alarm condition the problem must be located and corrected.

Ground Fault

A short between any circuit and earth ground will result in the following:

1. Activation of trouble relay contacts, trouble LED in a flashing mode, and local buzzer.
2. Operation of any output circuits which have been described as TROUBLE BELL.
3. "TROUBLE" and "GROUND" displayed on LCD.
4. Activation of the amber TROUBLE LED in a flashing mode. NOTE: The TROUBLE LED will continue to flash until all events in the TROUBLE queue are viewed. This is accomplished by scrolling through all of

the events by use of the scroll up and scroll down buttons. The LED will go steady after all trouble events have been viewed.

Loss or Reduction of AC Power

A reduction in the AC input voltage will result in the following:

1. Trouble LED and local buzzer will sound 1½ hour delay of trouble relay.
2. Operation of any output circuits which have been described as TROUBLE BELL.
3. "TROUBLE" and "A.C." displayed on LCD.
4. LCD Backlight will be extinguished.
5. Green AC POWER indicator on LED display will be extinguished.
6. Activation of yellow POWER TROUBLE indicator on LED display.
7. Activation of yellow SYSTEM TROUBLE indicator on LED display.
8. Activation of yellow OUTPUT indicator(s) on LED display of any output circuit(s) which have been described as TROUBLE BELL.

Low Battery Voltage

Loss of or reduction of battery voltage to 22 volts will result in the following:

1. Activation of trouble relay contacts, trouble LED and local buzzer.
2. Operation of any output circuits that have been described as TROUBLE BELL.
3. "TROUBLE" and "BATTERY" displayed on LCD.
4. Activation of yellow POWER TROUBLE indicator on LED display.
5. Activation of yellow SYSTEM TROUBLE indicator on LED display.
6. Activation of yellow OUTPUT indicator(s) on LED display of any output circuit(s) which have been described as TROUBLE BELL.

Loss Of Auxiliary Power Output

Loss of output of the auxiliary power will result in the following:

1. Activation of trouble relay contacts, trouble LED and local buzzer.
2. Operation of any output circuits that have been described as TROUBLE BELL.
3. "TROUBLE" and "AUX LOW" displayed on LCD.
4. Activation of yellow POWER TROUBLE indicator on LED annunciator module.
5. Activation of yellow SYSTEM TROUBLE indicator on LED annunciator module.
6. Activation of yellow OUTPUT indicator(s) on LED annunciator module of any output circuit(s) which have been described as TROUBLE BELL.
7. The remote annunciator RA-4410RC will not function if problem exists on non-resettable 24VDC.

To Silence the Buzzer (or outputs that have been described as trouble or supervisory bell)

Press the scroll up or scroll down buttons. Once all events in the trouble or supervisory queue have been viewed, the buzzer and appropriate outputs will silence. The applicable system TROUBLE or SUPERVISORY LED will change from flashing to steady.

NOTE: Any continuous trouble conditions that have been silenced automatically resound 24 hours after the first trouble condition was silenced.

To Silence a Signaling Appliance

Press the SIGNAL SILENCE button. All silencable outputs will de-activate. A trouble condition will be created. The Amber Alarm Silence LED will light.

CAUTION

Where audible and/or visual indicators are being used as an evacuation signal, do not silence an alarm condition without investigating and determining that an emergency condition does not exist.

NOTES:

1. Alarms initiated from zones that are in the waterflow mode cannot be silenced. The panel must be reset to silence audible alarm devices.
2. If silenceable waterflow indication is desired it must be programmed as detection and annunciated on the zone identification portion of the LCD.

To Reset an Alarm or Supervisory Condition

1. Determine the cause of the alarm condition and if necessary remove the cause.

2. Press the reset button.

To Reset A Trouble Condition

1. Determine the cause of the trouble condition and remove the cause.
2. This circuit is self-restoring. When all trouble conditions are removed all indications will return to normal.

NOTE: When an initiating device zone is operated in a Class A (Style D) mode any trouble condition will require manual operation of the reset switch to restore the panel to normal after the fault has been corrected.

Lamp Test


When the panel is in a Normal Condition, pushing the two top buttons will illuminate all of the LED's and display for approximately one second.

Remote Annunciator Model RA-4410RC Operation

Red LED's: Initiating Device Circuits Active (4)
 Notification/Release Circuits Active (4)
 Common Alarm (1)

Green LED's: AC Power

Yellow LED's: Initiating Device Circuits troubles (4)
 Output Circuit Troubles (4)
 Supervisory Initiating Zone (4)
 Supervisory Bell Output Active (4)
 (1) each: Sup 1/Abort, Supervisory 2, Power Trouble,
 Supervisory Trouble, System Trouble, Ground Fault,
 Pre-Discharge/Discharging, Alarm Silenced

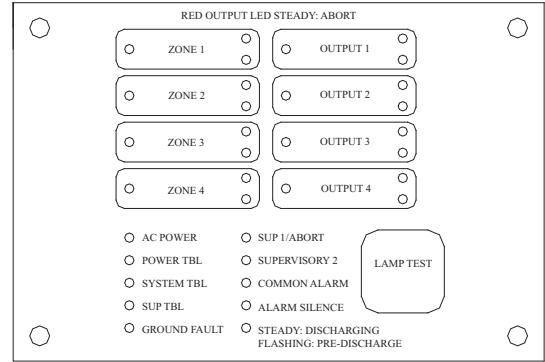

The appropriate LED flashes to indicate a change of status on the panel. A trouble or supervisory condition will flash the appropriate Yellow LED indicating the location of the condition. If any outputs are programmed as TROUBLE or SUPERVISORY BELL, that Yellow output LED will flash indicating the output is activated. Pressing the BUZZER SILENCE button on the panel changes the flashing zone Amber LED to steady on and turns the flashing Yellow output LED off.

An alarm condition will flash a Red LED indicating the zone in alarm and any outputs mapped to that zone that have activated. Pressing the SIGNAL SILENCE button changes the flashing Red Zone LED to steady on and the flashing Red Output LED mapped to that zone off unless the output is programmed as RELEASE. In addition, the Yellow ALARM/SILENCE LED will light.

Any zone programmed as WATERFLOW is considered non-silenceable so the signal and buzzer silence buttons will have no effect on the flashing zone and output LED's. A buzzer on the annunciator sounds for any trouble condition. When the panel has a trouble or supervisory condition, pressing the SILENCE/LAMP TEST button silences the condition at the panel and all annunciators. When no non-silenced trouble or supervisory conditions exist, pressing the SILENCE/LAMP TEST button can be used to test the LED's.

The release panel supervises and communicates with the annunciator via separate connections for the RS-485 communication and 24VDC power requirements of the RA-4410RC. Separate cables should be used for power and communication. Shielded cable shall be used for the communication line. Up to four annunciators can be connected to one panel. A rotary switch is provided on the panel to indicate how many annunciators are connected. Another rotary switch is on the annunciator to set the address. The annunciators must be addressed consecutively. Refer to bulletin #8840024 for installation instructions and maximum wire run.

Test Procedure

The system should be inspected, tested and maintained in accordance with NFPA-72 National Fire Alarm Code, Chapter 10 and any other requirements of the local authority having jurisdiction.

Test Procedure (Canada)

The system should be inspected, tested and maintained in accordance with ULC Standard CAN/ULC-S536 and any other requirements of the local authority having jurisdiction.

Testing should be done as a minimum as described below

1. Notify the fire department or other receiving station if alarm, supervisory and/or trouble signals are transmitted.
2. Notify the proper building personnel so that audible and/or visual signals can be ignored.
3. If the release panel is monitored by a building fire alarm panel, take appropriate action to eliminate any unwanted events.
4. Momentarily open each of the following circuits.
 - Each initiating device zone
 - Supervisory circuit
 - Notification Appliance/Releasing circuit - observe that this results in a trouble condition and all indicators operate as described in the appropriate preceding section for the particular circuit that is faulted.
5. Move the PROGRAM switch down. The LCD should respond: "LOOK AT HISTORY?". Press the bottom button until the display reads: "PASSWORD=000". Press the SET button three times. Press the FUNCTION (bottom) button until the LCD reads "SYSTEM MODE: NORMAL". Press the SELECT (middle) button. The LCD will read "SYSTEM MODE: ONE MAN WALKTEST". Press the SET (top) button then move the PROGRAM switch up. The panel will respond with "ONE MAN WALKTEST" and the time. The trouble LED will light. Any output described as "RELEASING" will automatically be disabled.

Note: The RCDS-1, Release Circuit Disconnect Switch, shall be used to provide physical means of disconnecting the release circuit in compliance with NFPA 72, 2007, 6.12.5.2.

⚠ WARNING

Failure to enter the walktest mode and subsequent operation of initiating zones may result in a release.

After 30 minutes of no activity in the walk test mode the panel automatically reverts to normal operation.

6. Operate each initiating device on all zones. All audible and visual alarm devices should operate for about 3 seconds. Then the system will automatically reset allowing the user to go to the next initiating device.
7. Operate each initiating device on the supervisory circuit. Observe that all the indications described in the section on supervisory conditions occur.
8. Move the PROGRAM switch down again. The LCD should respond: "LOOK AT HISTORY?"
 Press the FUNCTION (bottom) button until the LCD reads: PASSWORD=000, enter the password. Press the bottom button until the display reads: "SYSTEM MODE: ONE MAN WALKTEST"
 Press the SELECT (middle) button. The LCD will read: "SYSTEM MODE: NORMAL"
 Press the SET (top) button then restore the PROGRAM switch to the up position. The LCD will show the normal banner message.
9. All audible and visual indicators should be off.
10. Notify all building, fire department, and/or other receiving station personnel that the test has concluded.

Maintenance

Test batteries per local and national standards. At a minimum replace batteries every four (4) years or sooner depending on test results. The date of purchase shall be marked on all batteries.


Programming Mode Instructions

To use the Programming Mode push the program switch to the right (see drawing).

Panel Visual Display

As a general rule, the following applies on the Programming Mode buttons:

- The top button (SET) sets the message on the display into the memory.
- The middle button (SELECT) scrolls through the selections available for the function displayed.
- The bottom button (FUNCTION) allows the user to skip the function without changing the program.

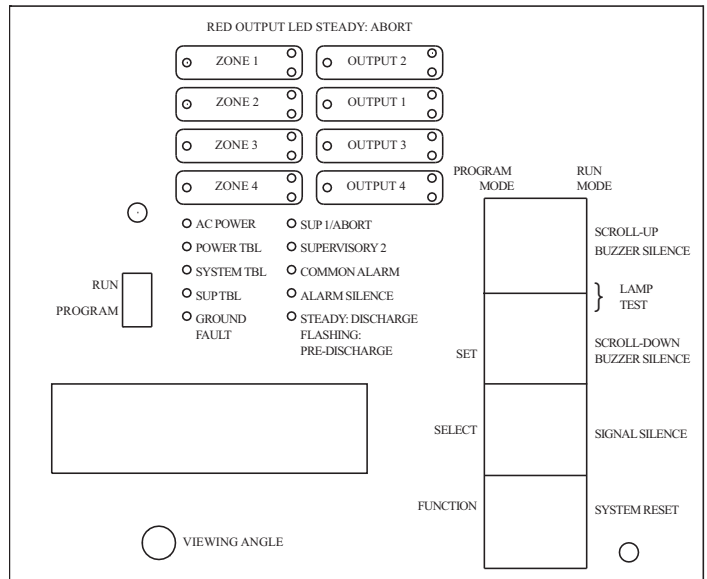

To program, push the Program Switch down.

There is no capability to back up screens in the program mode. If a mistake was made during programming, move the program switch back up, then move it down and start from the beginning.

To exit the program mode at any time, move the Program Switch to the left.

When the programming switch is down (see Panel Visual Display) the following will appear in the display window:

L	O	O	K		A	T									
H	I	S	T	O	R	Y	?								

History

To examine the HISTORY press the top button, the display window will show the time and date of the last event or action. To skip to the next function or to exit history, press the FUNCTION (bottom) button.

SET Press the top button to discover the time and date of the last event or action and to scroll forward.

SELECT To scroll back, press the middle button.

FUNCTION To exit or skip HISTORY, press the bottom button.

After pressing the FUNCTION (bottom) button the following will appear in the display window:

S	E	T		T	I	M	E	?							

Date and Time

SELECT To change the time, press the middle button.

FUNCTION To exit to the next function, press the bottom button.

If the middle button is pushed, the date and time will appear in the display window:

					0	1	/	0	5	/	2	0	0	7	
M	I	N	U	T	E	S		0	5	:	1	9	:	3	5

The date is shown at the top and the time at the bottom of the display window. "MINUTES" indicates that the user can now change the minutes.

SET Pressing the top button will decrease the minutes.

SELECT Pressing the middle button will increase the minutes.

FUNCTION When finished setting the minutes, Press the bottom button. The minutes will change to hours.

Continue this process and change the DAY, MONTH and YEAR. When you have finished changing the year, press the FUNCTION (bottom) button. A display similar to the following will appear:

P	A	S	S	W		R	D	=	0	0	0				
									^						

Password

This display prevents unauthorized programming of the panel by requiring the user to enter the proper password. To select the appropriate number for the space indicated by the ^ symbol, press the middle button. When the proper number is displayed press the top button to set the number and move to the next space. If the wrong password is entered, the panel will automatically return to a normal condition. All panels are shipped from the factory with a password of 000. If the password is lost contact Amerex.

SET After selecting the desired number, press the top button to set and move to the next number.

SELECT Press the middle button to scroll through the numbers.

FUNCTION Pressing the bottom button will have no effect.

After entering the correct password, a display similar to the following will appear:

I	N	I	T		Z	O	N	E		#	1				
E	N	A	B	L	E	D									

Zone Disabled/Enabled

This display allows the user to ENABLE or DISABLE Initiating zones. This display window shows that initiating ZONE #1 is enabled. To toggle from ENABLED to DISABLED or visa versa, press the SELECT (middle) button.

SET After selecting ENABLED or DISABLED, press the top button to set and move to the next zone.

SELECT Press the middle button to toggle between ENABLED or DISABLED.

FUNCTION To skip to the next function, press the bottom button.

After selecting all four zones or pressing the FUNCTION (bottom) button, the following will appear in the display window:

O	U	T	P	U	T		#	1							
E	N	A	B	L	E	D									

Output Enable/Disable

This display allows the user to ENABLE or DISABLE any of the output circuits.

SET After selecting ENABLED or DISABLED, press the top button to set and move to the next output.

SELECT Press the middle button to toggle between ENABLED or DISABLED.

FUNCTION To skip to the next function, press the bottom button.

After selecting all four outputs or pressing the FUNCTION (bottom) button, the following will appear in the display window:

NOTICE Disabling any input or outputs will create a trouble condition on the panel.

S	Y	S	T	E	M		M	O	D	E	:				
N	O	R	M	A	L										

One Man Walktest

This display allows the user to select system mode NORMAL or ONE MAN WALKTEST by pressing the SELECT (middle) button to toggle back and forth from NORMAL to ONE MAN WALKTEST. When the desired mode is displayed, press the SET (top) button. If ONE MAN WALKTEST is selected for test purposes, the display must be restored to the NORMAL setting after the test is completed by toggling to it using the SELECT (middle) button.

WARNING

After 30 minutes of no activity the panel automatically reverts to normal.

Note: NFPA 72, 2007, 6.12.5.2. requires a physical means of disconnecting release circuits. The RCDS-1, complies with those requirements.

- SETAfter selecting NORMAL or ONE MAN WALKTEST, press the top button to set that mode.
- SELECTPress the middle button to toggle between NORMAL and CROSS ZONED.
- FUNCTIONPress the bottom button to skip to the next function.

After selecting the operating mode or pressing the FUNCTION button a display similar to the following will appear in the display window:

P	R	O	G	R	A	M		#	0						

Amerex SR-X Standard Program Information

The SR-X panel has 9 standard programs which are detailed in the following pages. Selecting one of these programs will automatically program every function of the panel except the custom banner and zone message functions.

NOTES:

The release discharge time is continuous for all 9 programs.

In the programs the pre-discharge timer defaults to 60 seconds, manual release pre-discharge timer defaults to 30 seconds, the abort mode defaults to UL.

The following is an explanation of how the various programs operate and information about the types of devices that are to be connected to the input and output zones.

If none of the standard programs are acceptable for the installation required, select the custom program #0 then press the SET (top) button. This will allow the user to custom program the panel. Turn to page 41 for custom program information.

	Type	Description
Alarm Zones	Detection	Smoke Detectors, Spot Type Heat Detectors
	Waterflow	PS10 Pressure Switch
	Linear Heat	Cable Type Heat Detectors
	Manual Release	Pull Stations
Supervisory Zones	Supervisory	Valve Tamper, Low Air, High Air, Room Temperature
	Low Air supervisory	Low Air Switch
	High Air	High Air Switch
	Tamper	Valve Tamper Switch
	Low Air Alarm *	PS10, PS40
Outputs	Alarm	24VDC Bells, Horns, Strobes, to indicate an alarm condition.
	Release	Solenoid Valve, Squib, Releasing Mechanism
	Supervisory	24VDC Bells, Horns, Strobes, to indicate a supervisory condition.
	Trouble	24VDC Bells, Horns, Strobes, to indicate a trouble condition.

To program the SR-X panel to operate with one of the following 9 standard programs:

A description, theory of operation, and wiring diagrams for all standard programs start on the next page.


1. Press SELECT (center) button to scroll to the program number (#1 through #9) you desire.
2. Press SET (top) button.
3. Turn to page 44 to program the banner message and to finish programming the panel.

A description, theory of operation, and wiring diagrams for all standard programs start on the next page.

SET	<input type="checkbox"/>	After selecting the proper program number, press the top button to set the program and move to the next function.
SELECT	<input type="checkbox"/>	Press the middle button to scroll through the programs.
FUNCTION	<input type="checkbox"/>	Press the bottom button to skip to the next function.

NOTICE After selecting the desired program number with the middle button, SET (top button) **must** be pressed to set the program.

Wiring Diagram Program #1
Single Hazard, Cross Zoned with 2 Release Circuits

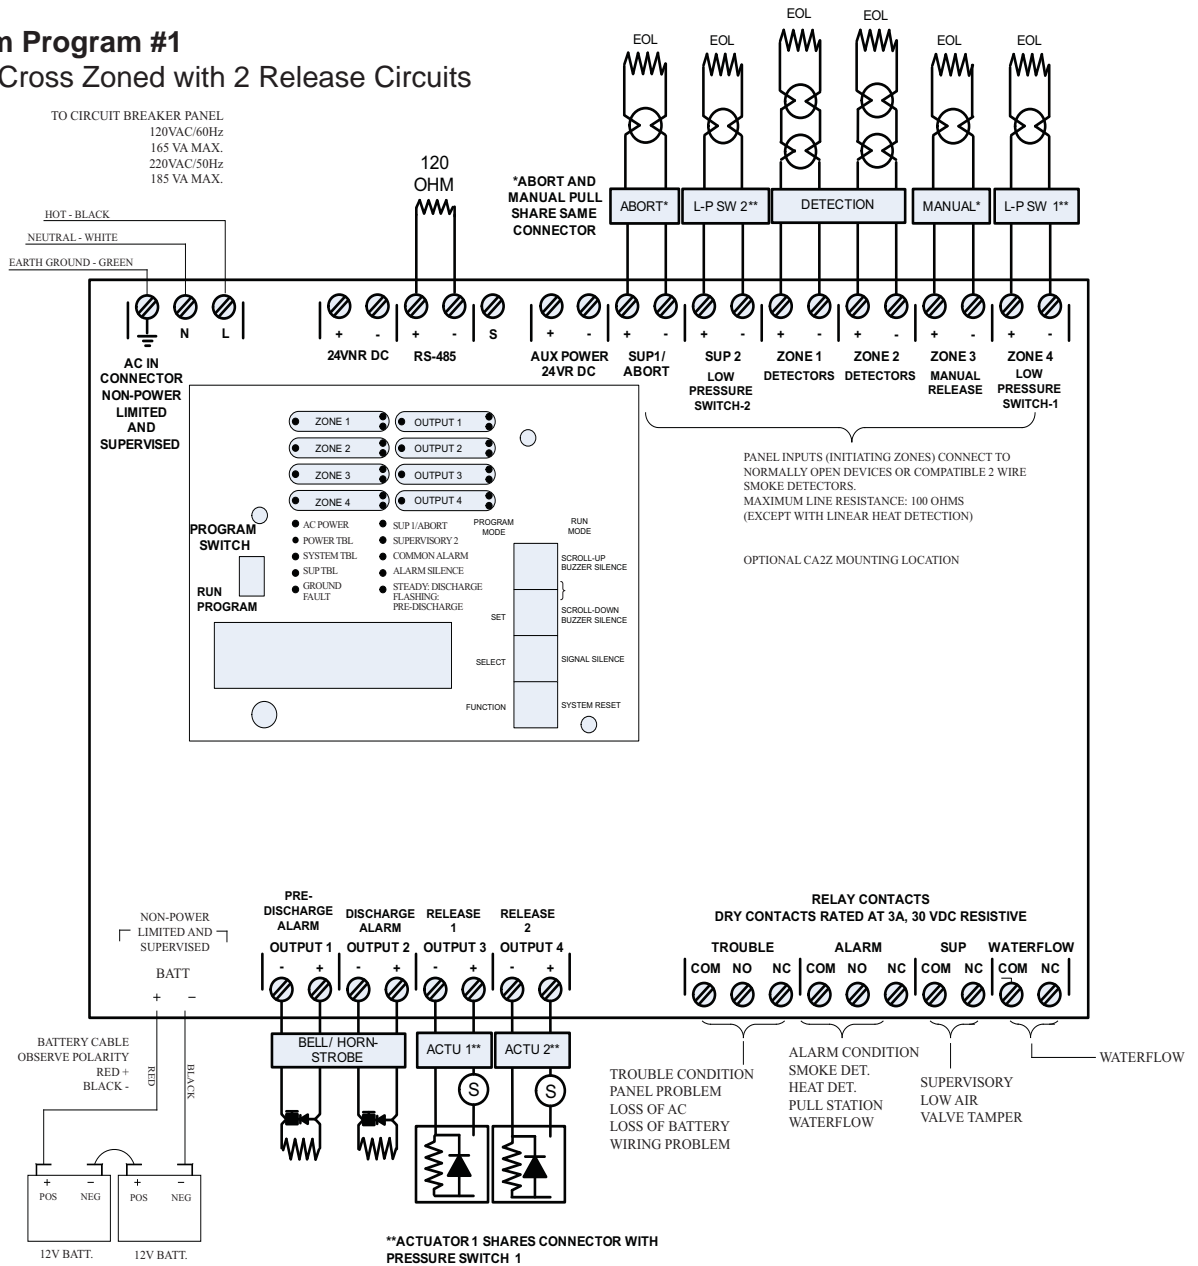

NOTES:


1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.

Amerex Program Option 1																		
<p>Single hazard cross-zoned detection with Zone 1 and Zone 2. When either Zone 1 or Zone 2 are in alarm the Pre-Discharge Alarm Output 1 is activated. When both Zone 1 and 2 are in Alarm, Output 1 is deactivated and simultaneously The Discharge Alarm Output 2 is activated. The count down timer begins. Activation of Input 3 will only Activate Output 2 and then begin the count down time. When the count down time expires, both Output 3 and Output 4 are activated.</p> <p>Operation of an Abort Switch would stop the time delay count down at 10 seconds and upon release of the Abort Switch, the counter would resume counting down.</p>				Output Circuit								Relays						
				Action	Device	Circuit	Output 1	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4	Trouble
On Steady	Pre-Disch. Alarm	Output 1																
Off	Pre-Disch. Alarm	Output 1																
On Steady	Disch. Alarm	Output 2																
30 Sec. Delay Starts	Release 1	Output 3																
10 Sec. Delay Starts	Release 1	Output 3																
Time Delay Stops at 10 Sec.	Release 1	Output 3																
Time Delay Starts at 10 Sec.	Release 1	Output 3																
30 Sec. Delay Starts	Release 2	Output 4																
5 Sec. Delay Starts	Release 2	Output 4																
Time Delay Stops at 10 Sec.	Release 2	Output 4																
Time Delay Starts at 10 Sec.	Release 2	Output 4																
Transfer	Relay	Trouble																
Transfer	Relay	Alarm																
Transfer	Relay	Supervisory																
Transfer	Relay	Water																
Action	Latch	Device	Circuit															
Operated	No	Abort Sw.	Sup 1/Abort						●					●				
Released	No	Abort Sw.	Sup 1/Abort						●					●				
Open	No	Abort Sw.	Sup 1/Abort											●				
Operates	No	L-P Switch 2	Supv. #2													●		
Open	No	L-P Switch 2	Supv. #2												●			
Alarm	Yes	Detectors	Zone 1		◐	●	●	◐										◐
Open	No	Detectors	Zone 1												●			
Alarm	Yes	Detectors	Zone 2		◐	●	●	◐										◐
Open	No	Detectors	Zone 2												●			
Operated	Yes	Man. Rel.	Zone 3				●	●							●			●
Open	No	Man. Rel.	Zone 3												●			
Operates	No	L-P Switch 1	Zone 4														●	
Open	No	L-P Switch 1	Zone 4												●			

Program Legend	
●	Both zones active
◐	Either zone active

Wiring Diagram Program #2

Same as Program #1 except Output 1 General Alarm stays on

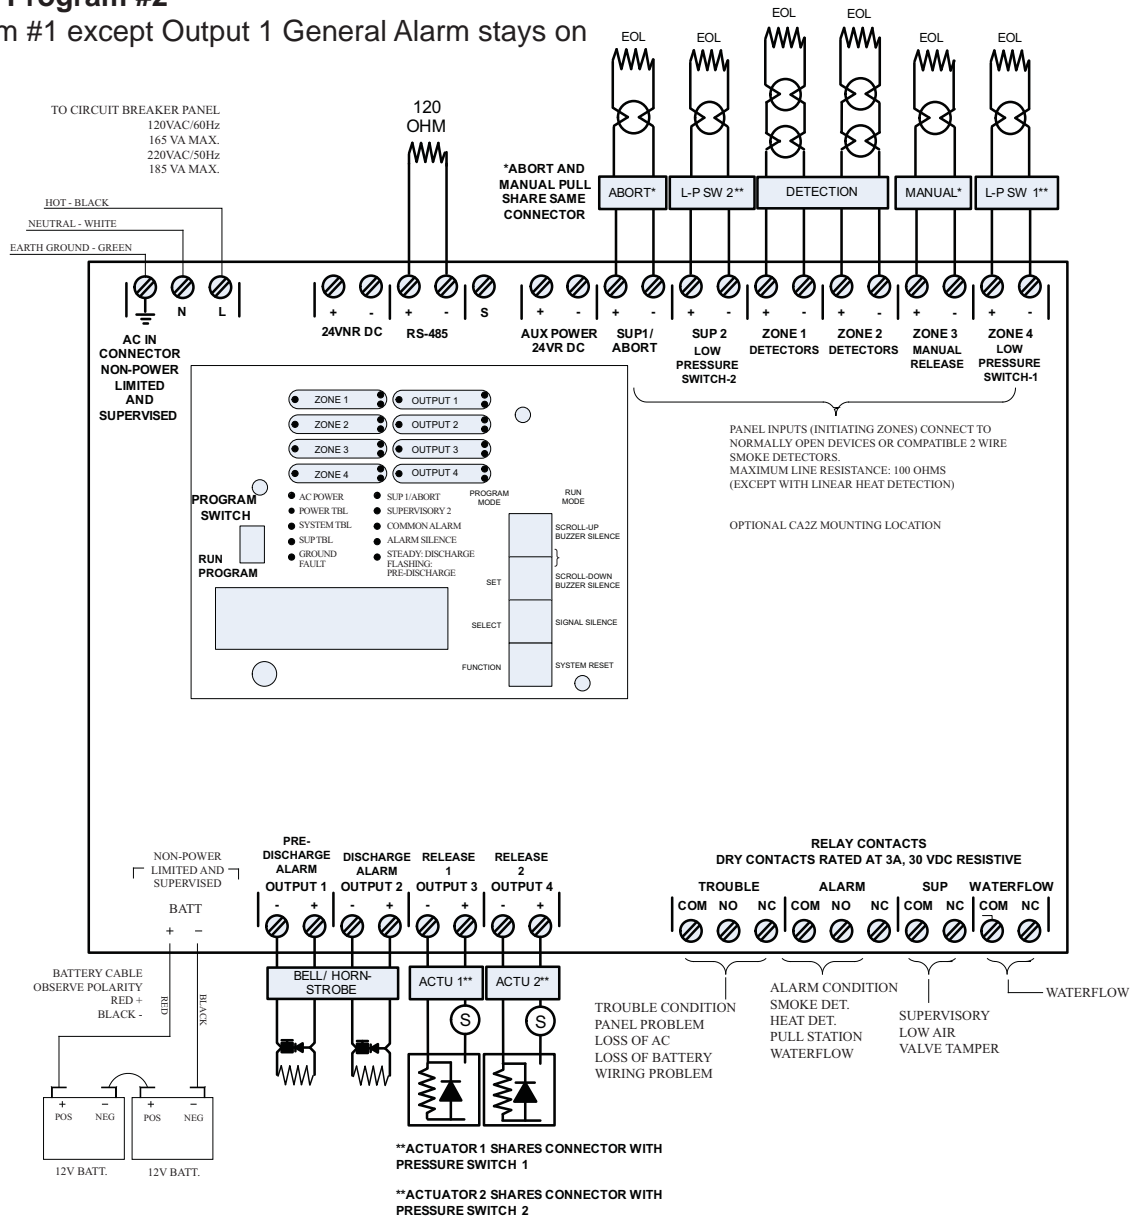

NOTES:


1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.

Amerex Program Option 2																	
<p>Single hazard cross-zoned detection with Zone 1 and Zone 2. When either Zone 1 or Zone 2 are in alarm the Pre-Discharge Alarm Output 1 is activated. When both Zone 1 and 2 are in Alarm the Discharge Alarm Output 2 is activated. The count down timer begins. Activation of Input 3 will only Activate Output 2 and then begin the count down time. When the count down time expires, both Output 3 and Output 4 are activated.</p> <p>Operation of an Abort Switch would stop the time delay count down at 10 seconds and upon release of the Abort Switch, the counter would resume counting down.</p>				Output Circuit								Relays					
				Action	Device	Circuit	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4	Trouble
Operated	No	Abort Sw.	Sup 1/Abort				●										
Released	No	Abort Sw.	Sup 1/Abort					●									
Open	No	Abort Sw.	Sup 1/Abort										●				
Operates	No	L-P Switch 2	Supv. #2												●		
Open	No	L-P Switch 2	Supv. #2										●				
Alarm	Yes	Detectors	Zone 1	◐	●	◐				◐				●			◐
Open	No	Detectors	Zone 1										●				
Alarm	Yes	Detectors	Zone 2	◑	●	◑				◑				●			◑
Open	No	Detectors	Zone 2										●				
Operated	Yes	Man. Rel.	Zone 3		●		●				●			●			●
Open	No	Man. Rel.	Zone 3										●				
Operates	No	L-P Switch 1	Zone 4												●		
Open	No	L-P Switch 1	Zone 4										●				

Program Legend	
●	Both zones active
◐	Either zone active
◑	

Wiring Diagram Program #3

Same as Program #1 except Output 1 General Alarm turns on when either zone is in alarm

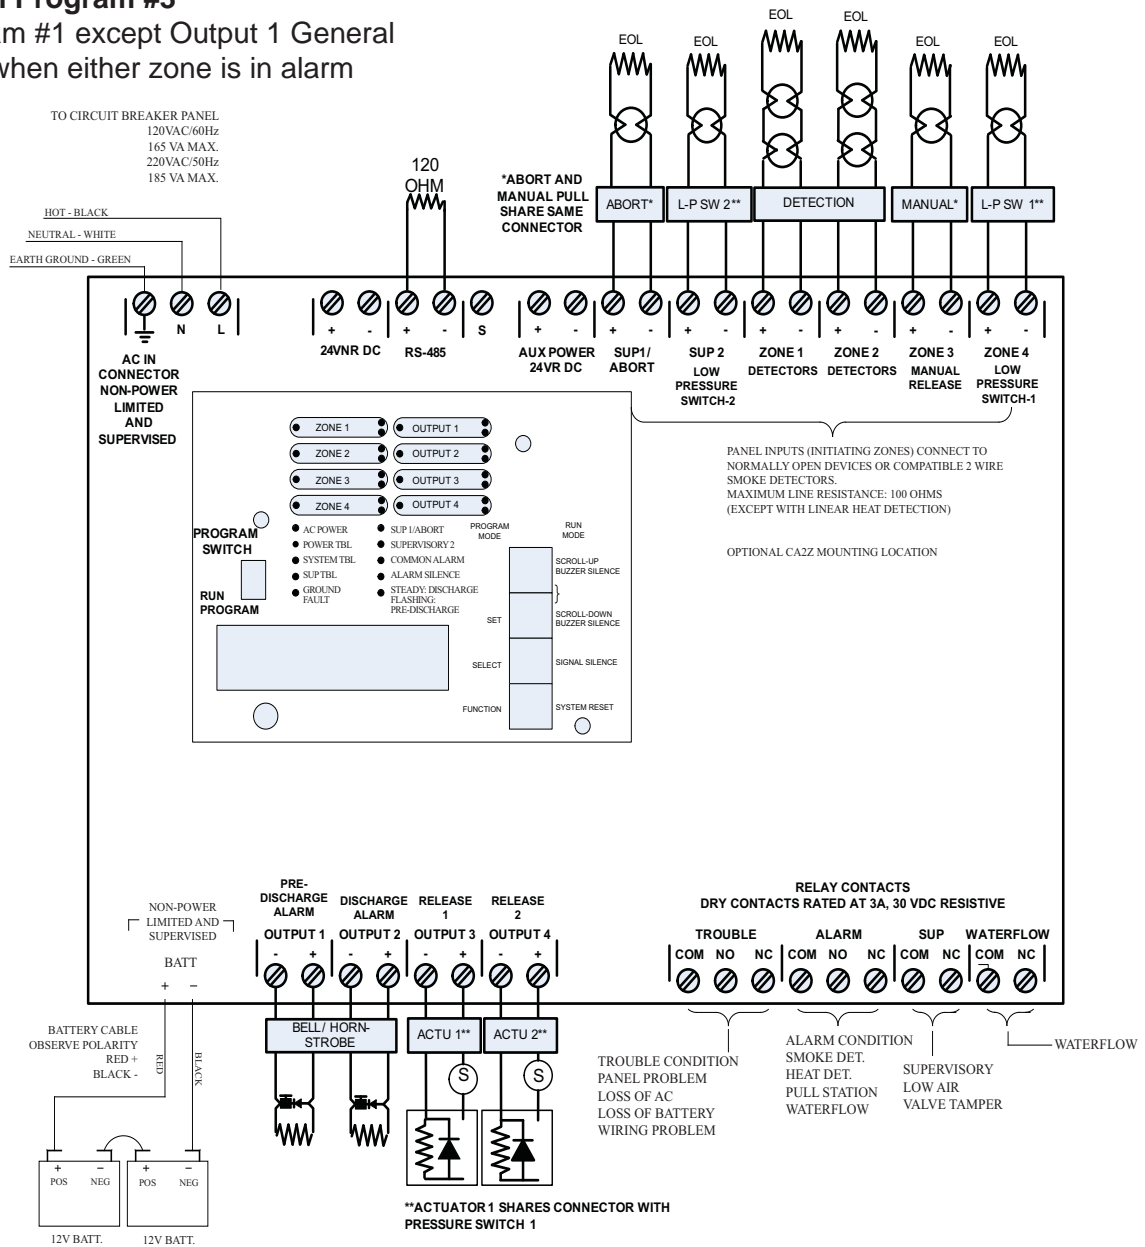

NOTES:


1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.

Amerex Program Option 3															
<p>Single hazard cross-zoned detection with Zone 1 and Zone 2. When either Zone 1 or Zone 2 are in alarm the Pre-Discharge Alarm Output 1 is activated. When both Zone 1 and 2 are in Alarm, Output 1 is deactivated and simultaneously The Discharge Alarm Output 2 is activated. The count down timer begins. Activation of Input 3 will only Activate Output 2 and then begin the count down time. When the count down timer expires, Output 1, Output 3 and Output 4 are activated.</p> <p>Operation of an Abort Switch would stop the time delay count down at 10 seconds and upon release of the Abort Switch, the counter would resume counting down.</p>				Output Circuit								Relays			
				Action				Device				Relays			
				Circuit	Output 1	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4
Action	Latch	Device	Circuit												
Operated	No	Abort Sw.	Sup 1/Abort				●			●					
Released	No	Abort Sw.	Sup 1/Abort					●			●				
Open	No	Abort Sw.	Sup 1/Abort									●			
Operates	No	L-P Switch 2	Supv. #2											●	
Open	No	L-P Switch 2	Supv. #2									●			
Alarm	Yes	Detectors	Zone 1	◐	●	◐				◐			●		◐
Open	No	Detectors	Zone 1									●			
Alarm	Yes	Detectors	Zone 2	◐	●	◐	◐			◐			●		◐
Open	No	Detectors	Zone 2									●			
End of Time Delay					●		●								
Operated	Yes	Man. Rel.	Zone 3		●		●			●			●		●
Open	No	Man. Rel.	Zone 3									●			
Operates	No	L-P Switch 1	Zone 4											●	
Open	No	L-P Switch 1	Zone 4									●			

Program Legend	
●	Both zones active
◐	Either zone active
◑	

Wiring Diagram Program #4

Same as Program #1 except Output 1 General Alarm to pulse with on input in alarm, Discharge Alarm to turn on at time of system discharge

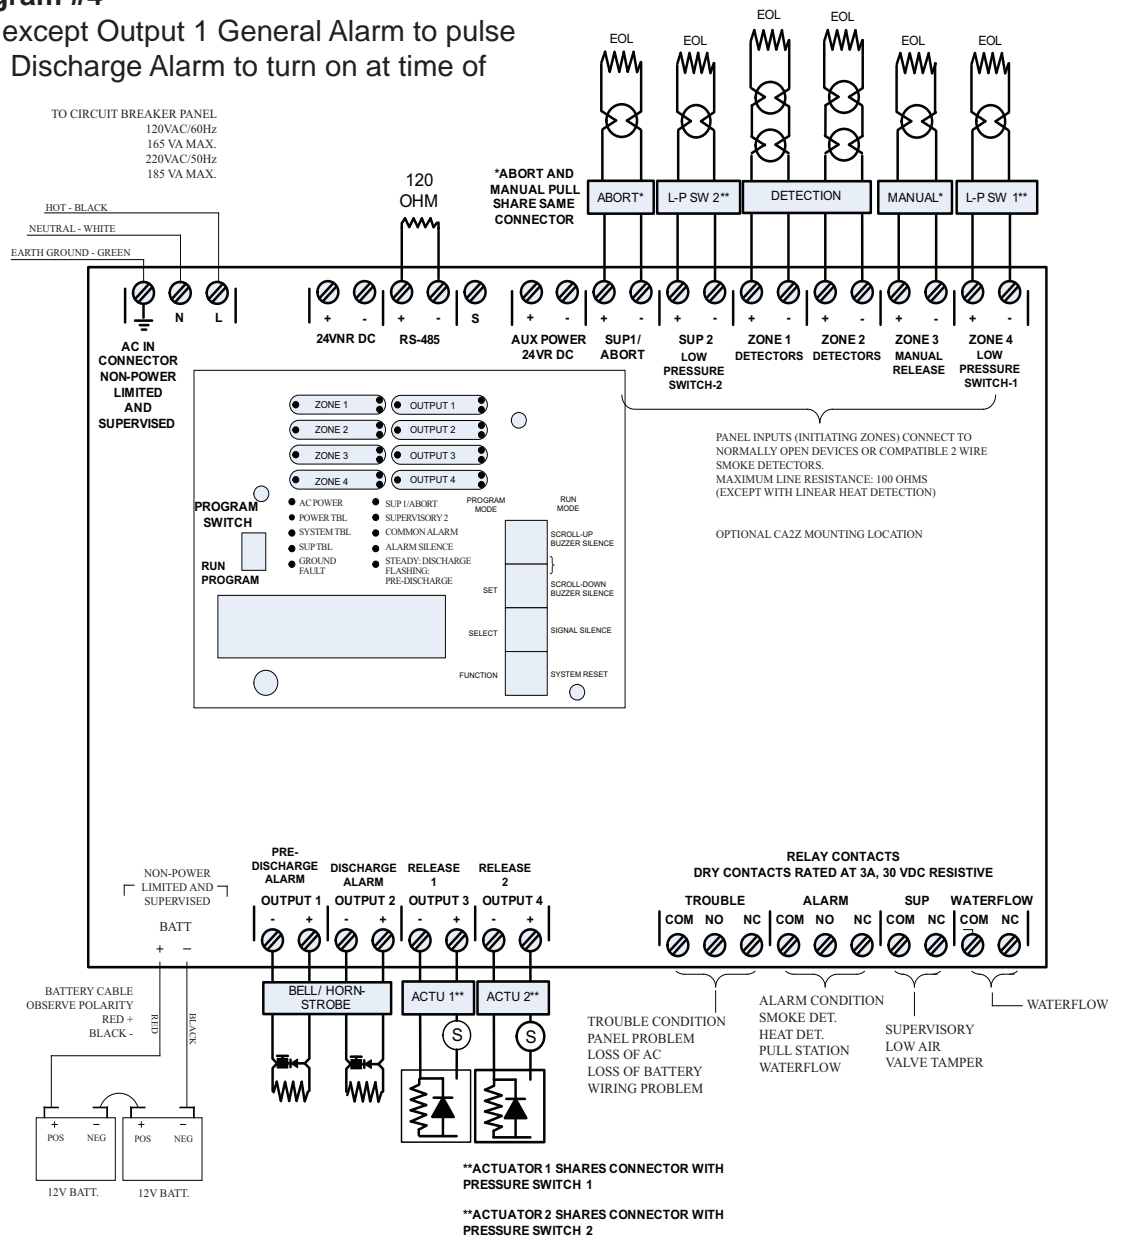

NOTES:


1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.
12. Only horns or bells may be connected to a pulsing output.

Amerex Program Option 4																		
<p>Single hazard cross-zoned detection with Zone 1 and Zone 2. When either Zone 1 or Zone 2 are in alarm the Pre-Discharge Alarm Output 1 is activated with a pulse pattern.. When both Zone 1 and 2 are in Alarm, Output 1 is changes to a steady output. When the countdown timer expires Output 1 is deactivated and simultaneously the Discharge Alarm Output 2 is activated. Activation of Input 3 activates Output 1 and then begin the count down timer. When the count down time expires, Output 2, Output 3 and Output 4 are activated.</p> <p>Operation of an Abort Switch would stop the time delay count down at 10 seconds and upon release of the Abort Switch, the counter would resume counting down.</p>				Output Circuit										Relays				
				Action	Device	Circuit	Output 1	Output 1	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4
Operated	No	Abort Sw.	Sup 1/Abort							●				●				
Released	No	Abort Sw.	Sup 1/Abort							●				●				
Open	No	Abort Sw.	Sup 1/Abort												●			
Operates	No	L-P Switch 2	Supv. #2														●	
Open	No	L-P Switch 2	Supv. #2												●			
Alarm	Yes	Detectors	Zone 1	◐	●			◐				◐				●		◐
Open	No	Detectors	Zone 1												●			
Alarm	Yes	Detectors	Zone 2	◐	●			◐				◐				●		◐
Open	No	Detectors	Zone 2												●			
End of Time Delay						●	●											
Operated	Yes	Man. Rel.	Zone 3		●			●				●				●		●
Open	No	Man. Rel.	Zone 3												●			
Operates	No	L-P Switch 1	Zone 4														●	
Open	No	L-P Switch 1	Zone 4												●			

Program Legend	
●	Both zones active
◐	Either zone active
◑	

Wiring Diagram Program #5

Same as Program #1 except with single discharge,
Output 4 signals a Supervisory Condition

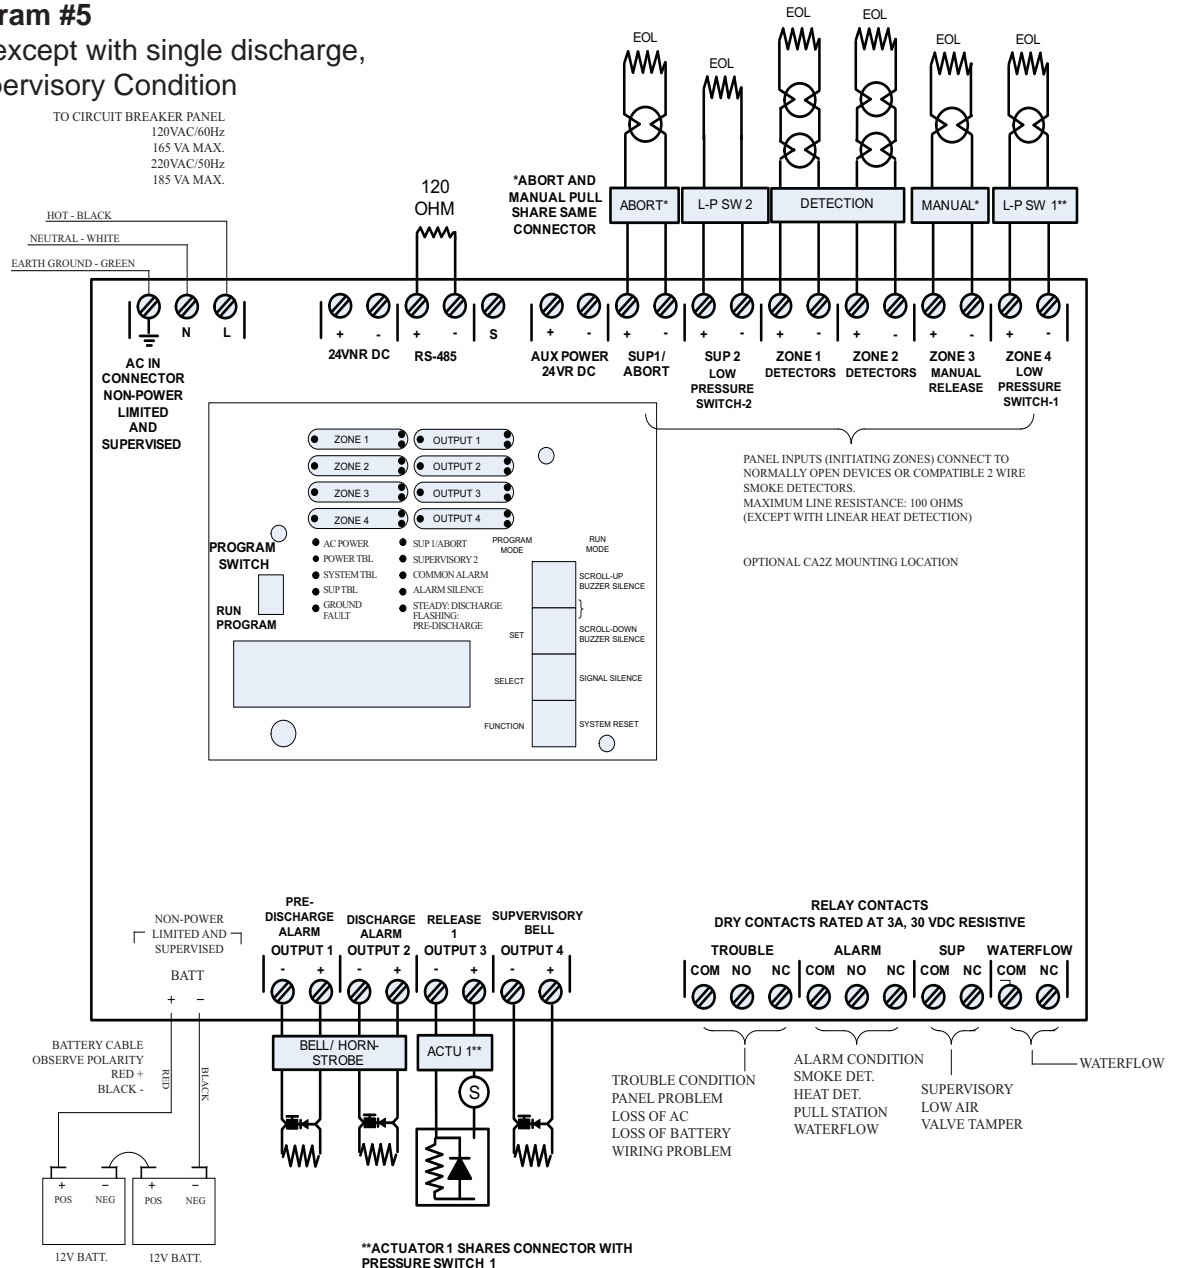

NOTES:

1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.

Amerex Program Option 5															
<p>Single hazard cross-zoned detection with Zone 1 and Zone 2. When either Zone 1 or Zone 2 are in alarm the Pre-Discharge Alarm Output 1 is activated. When both Zone 1 and 2 are in Alarm, Output 1 is deactivated and simultaneously The Discharge Alarm Output 2 is activated. The count down timer begins. Activation of Input 3 will only Activate Output 2 and then begin the count down timer. When the count down time expires Output 3 activates. When Input 4 is activated Output 4 is activated.</p> <p>Operation of an Abort Switch would stop the time delay count down at 10 seconds and upon release of the Abort Switch, the counter would resume counting down.</p>				Output Circuit							Relays				
				Action	Device	Circuit	Output 1	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Trouble
Operated	No	Abort Sw.	Sup 1/Abort					●							
Released	No	Abort Sw.	Sup 1/Abort						●						
Open	No	Abort Sw.	Sup 1/Abort								●				
Operates	No	L-P Switch 2	Supv. #2							●			●		
Open	No	L-P Switch 2	Supv. #2								●				
Alarm	Yes	Detectors	Zone 1	◐	●	●	◐					●			◐
Open	No	Detectors	Zone 1								●				
Alarm	Yes	Detectors	Zone 2	◑	●	●	◑					●			◑
Open	No	Detectors	Zone 2								●				
Operated	Yes	Man. Rel.	Zone 3			●		●				●			●
Open	No	Man. Rel.	Zone 3								●				
Operates	No	L-P Switch 1	Zone 4							●			●		
Open	No	L-P Switch 1	Zone 4								●				


Program Legend	
●	Both zones active
◐	Either zone active
◑	

Wiring Diagram Program #6

Dual Hazard, Single Zoned with 2 Release Circuits

Zone 1 initiates Output 3

Zone 2 initiates Output 4

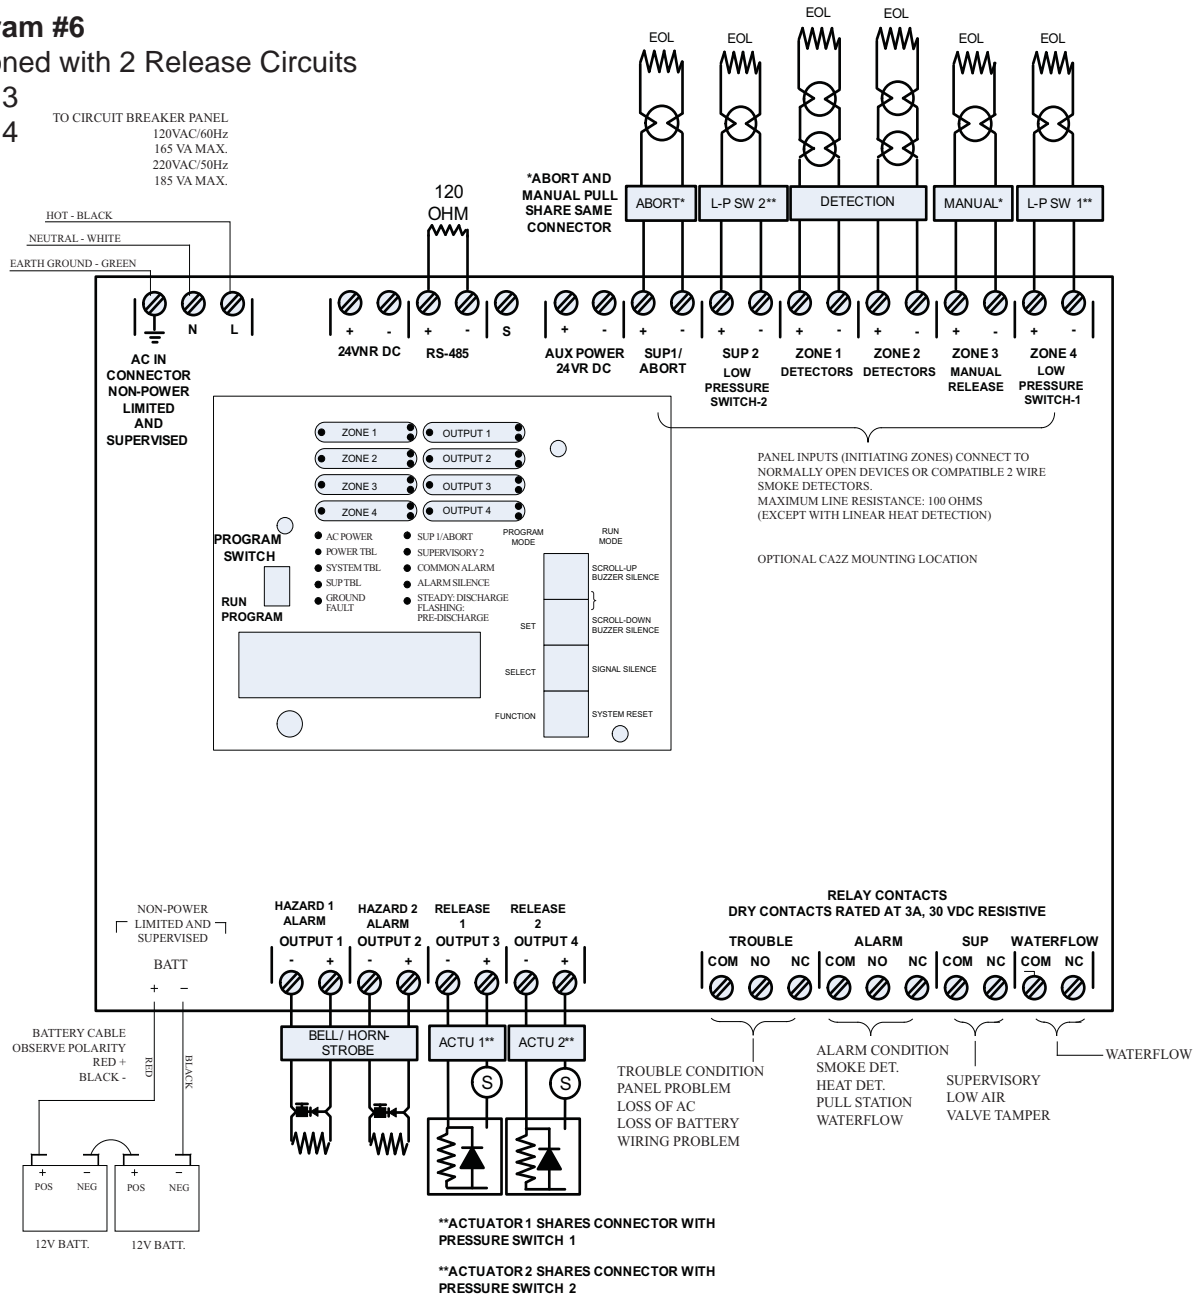

NOTES:


1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.

Amerex Program Option 6																	
<p>Dual hazard, split release with a detection zone and a manual release zone for each hazard. When Zone 1 or Zone 3 are activated, Output 1 is activated the count down timer begins. Once the count down timer expires, Output 3 is activated. When Zone 2 or Zone 4 are activated, Output 2 is activated the count down timer begins. Once the count down timer expires, Output 4 is activated.</p> <p>Operation of the Abort Switch would stop the time delay on both release circuits at 10 seconds and upon release of the Abort Switch the count down would resume.</p>				Output Circuit										Relays			
				Action	Device	Circuit	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4	Trouble
Operated	No	Abort Sw.	Abort					●									
Released	No	Abort Sw.	Abort						●								
Open	No	Abort Sw.	Abort										●				
Operates	No	L-P Switch 2	Supv. #2												●		
Open	No	L-P Switch 2	Supv. #2										●				
Alarm	Yes	Detectors	Zone 1	●		●								●			●
Open	No	Detectors	Zone 1										●				
Alarm	Yes	Detectors	Zone 2		●				●					●			●
Open	No	Detectors	Zone 2										●				
Operated	Yes	Man. Rel.	Zone 3	●		●								●			●
Open	No	Man. Rel.	Zone 3										●				
Operated	Yes	Man. Rel.	Zone 4		●					●				●			●
Open	No	Man. Rel.	Zone 4										●				

Program Legend	
●	Both zones active
◐	Either zone active

Wiring Diagram Program #7

Dual Hazard, Single Zoned with 2 Release Circuits
 Alarm Circuit pulses until end of delay, then steady on
 Zone 1 initiates Output 3
 Zone 2 initiates Output 4

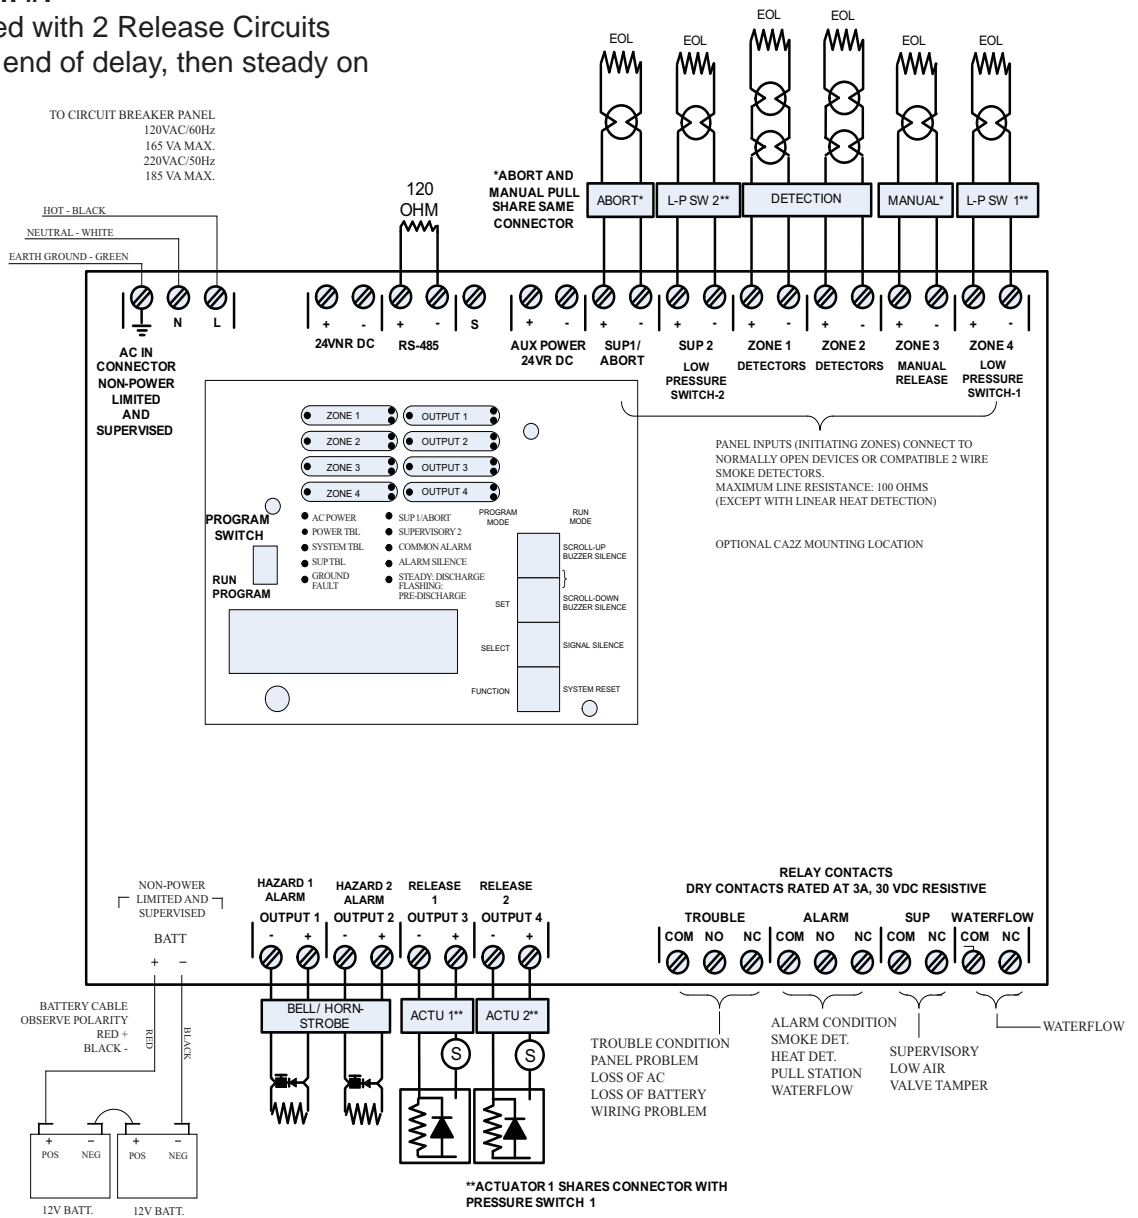

NOTES:


1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.
12. Only horns or bells may be connected to a pulsing output.

Amerex Program Option 7																			
<p>Dual hazard, split release with a detection zone and a manual release zone for each hazard. When Zone 1 or Zone 3 is activated, Output 1 is activated as a pulsing output and the count down timer begins. Once the count down timer expires, Output 3 is activated and Output 1 changes to a steady output. When Zone 2 or Zone 4 are activated, Output 2 is activated as a pulsing output and the count down timer begins. Once the count down timer expires, Output 4 is activated and Output 2 changes to a steady output.</p> <p>The Abort Switch will stop the time delay to 10 seconds and upon release of the Abort Switch, the time would resume counting down. The Abort Switch will interrupt Output 3 and Output 4.</p>				Output Circuit								Relays							
				Action	Device	Circuit	Output 1	Output 1	Output 2	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4	Trouble
Operated	No	Abort Sw.	Abort	●					●					●					
Released	No	Abort Sw.	Abort						●					●					
Open	No	Abort Sw.	Abort											●					
Operates	No	L-P Switch 2	Supv. #2														●		
Open	No	L-P Switch 2	Supv. #2												●				
Alarm	Yes	Detectors	Zone 1	●			●								●			●	
Open	No	Detectors	Zone 1												●				
Alarm	Yes	Detectors	Zone 2			●					●					●		●	
Open	No	Detectors	Zone 2												●				
Operated	Yes	Man. Rel.	Zone 3	●				●								●		●	
Open	No	Man. Rel.	Zone 3												●				
Operated	Yes	Man. Rel.	Zone 4			●						●				●		●	
Open	No	Man. Rel.	Zone 4												●				
End of Time Delay Hazard 1					●														
End of Time Delay Hazard 2						●													

Program Legend	
●	Both zones active
◐	Either zone active

Wiring Diagram Program #8

Single Hazard, Single Zoned with 2 Release Circuits
 Either Zone initiates Output 3 and Output 4

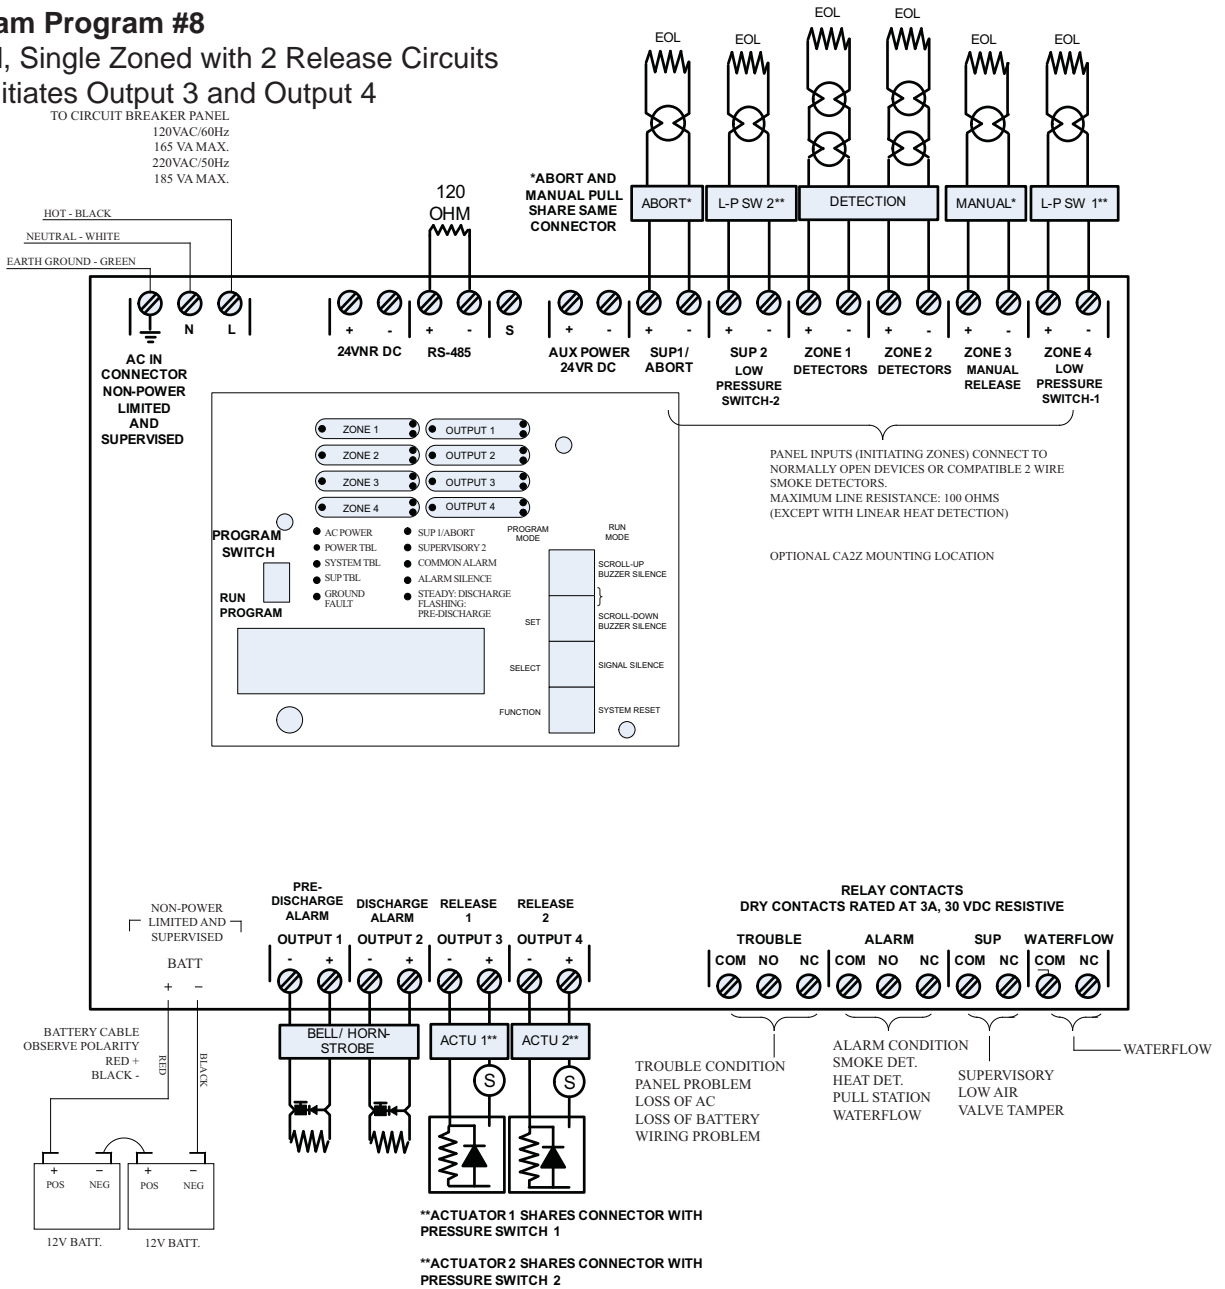

NOTES:


1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.

Amerex Program Option 8																			
<p>Single hazard with dual release. When Zone 1 or Zone 2 is activated, Output 1 is activated and the count down timer begins. When Zone 3 or Zone 4 is activated, the countdown time begins. When the count down timer expires, Output 1 is deactivated and Output 2, Output 3 and Output 4 are simultaneously activated. Output 2 is the discharge confirmation output and Output 3 and 4 are releasing outputs.</p> <p>The Abort Switch will stop the time delay to 10 seconds and upon release of the Abort Switch, the time would resume counting down. The Abort Switch will interrupt Output 3 and Output 4.</p>				Output Circuit										Relays					
				Device	Action	Circuit	Output 1	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4	Relay
Input Circuit				Pre-Disch. Alarm	On Steady	Output 1										Relay	Relay	Relay	Relay
				Pre-Disch. Alarm	Off	Output 1									Relay	Relay	Relay	Relay	
				Disch. Alarm	On Steady	Output 2									Relay	Relay	Relay	Relay	
				Release 1	30 Sec. Delay Starts	Output 3									Relay	Relay	Relay	Relay	
				Release 1	10 Sec. Delay Starts	Output 3									Relay	Relay	Relay	Relay	
				Release 1	Time Delay Stops at 10 Sec.	Output 3									Relay	Relay	Relay	Relay	
				Release 1	Time Delay Starts at 10 Sec.	Output 3									Relay	Relay	Relay	Relay	
				Release 2	30 Sec. Delay Starts	Output 4									Relay	Relay	Relay	Relay	
				Release 2	10 Sec. Delay Starts	Output 4									Relay	Relay	Relay	Relay	
				Release 2	Time Delay Stops at 10 Sec.	Output 4									Relay	Relay	Relay	Relay	
				Release 2	Time Delay Starts at 10 Sec.	Output 4									Relay	Relay	Relay	Relay	
				Relay	Transfer	Trouble									Relay	Relay	Relay	Relay	
				Relay	Transfer	Alarm									Relay	Relay	Relay	Relay	
				Relay	Transfer	Supervisory									Relay	Relay	Relay	Relay	
				Relay	Transfer	Water									Relay	Relay	Relay	Relay	
Action	Latch	Device	Circuit	Output 1	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Output 4	Output 4	Output 4	Relay	Relay	Relay	Relay	
Operated	No	Abort Sw.	Abort						●										
Released	No	Abort Sw.	Abort							●									
Open	No	Abort Sw.	Abort												●				
Operates	No	L-P Switch 2	Supv. #2														●		
Open	No	L-P Switch 2	Supv. #2												●				
Alarm	Yes	Detectors	Zone 1	●			●				●				●			●	
Open	No	Detectors	Zone 1												●				
Alarm	Yes	Detectors	Zone 2	●			●				●				●			●	
Open	No	Detectors	Zone 2												●				
End of Time					●	●													
Operated	Yes	Man. Rel.	Zone 3	●			●				●				●			●	
Open	No	Man. Rel.	Zone 3												●				
Operated	Yes	Man. Rel.	Zone 4	●			●				●				●			●	
Open	No	Man. Rel.	Zone 4												●				

Program Legend	
●	Both zones active
◐	Either zone active
◑	

Wiring Diagram Program #9

Single Hazard, Cross Zoned with 2 Release Circuits
 Zone 4 and Output 4 are fire alarm only for second space

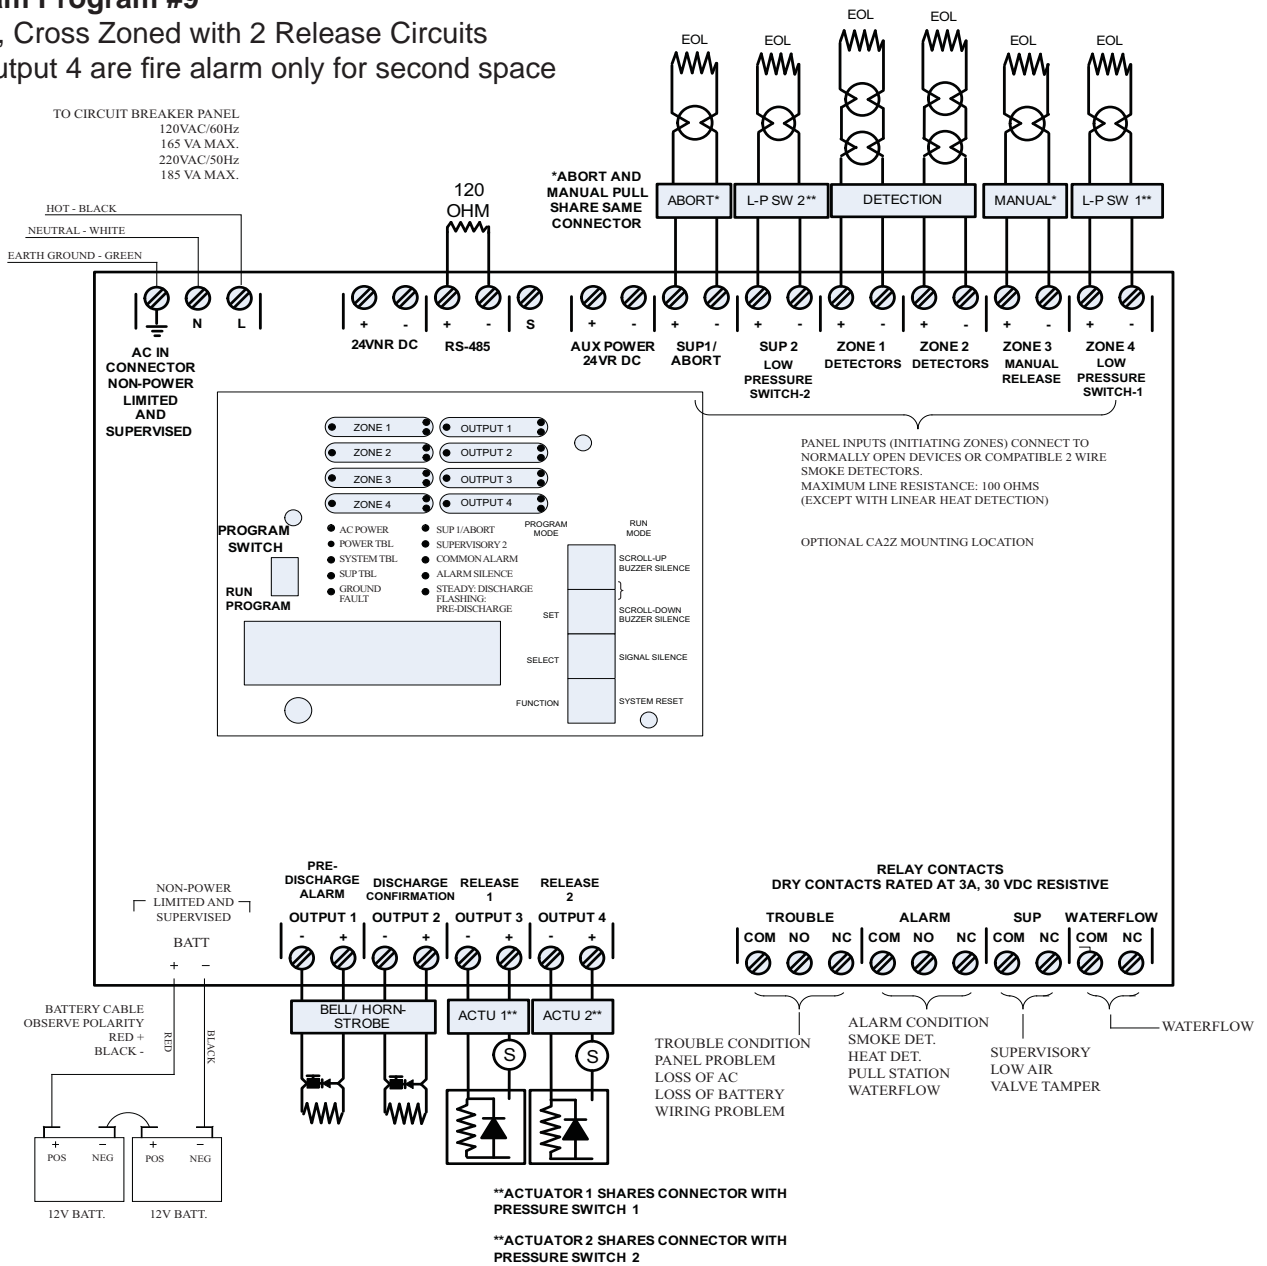

NOTES:

1. Connect only UL Listed 24 VDC devices to indicating circuits.
2. EOL Diode is a part of p/n 19346.
3. Leave EOLR provided (p/n 19345) on all unused circuits.
4. Polarity mark on output terminal is for a normal, no alarm condition.
5. Polarity reverses when output is activated.
6. Maximum current for all four outputs is 1 Amp. Maximum voltage is 33VDC.
7. Maximum current for all four outputs combined is 2 ½ Amps. All outputs are special application 24VDC.
8. All initiating and NAC circuits are supervised and power limited. All frequencies are continuous.
9. Refer to this manual for installation, test and maintenance information.
10. Maximum resistance on outputs is 10 Ohms. Maximum resistance on outputs programmed as releasing is 1 divided by current requirements of solenoid (1.67 Ohms for Amerex CPS system).
11. Notification outputs do not provide synchronization. If synchronization is needed, refer to the NAC table on page 56. Synchronization is only on one circuit and not between circuits. The maximum cannot exceed 1 amp or whatever the maximum that the sync' module can support, whichever is lower.

Amerex Program Option 9															
<p>Single hazard cross-zoned detection with Zone 1 and Zone 2. When either Zone 1 or Zone 2 is in alarm the Pre-Discharge Alarm Output 1 is activated. When both Zone 1 and 2 are in Alarm, Output 1 is deactivated and simultaneously The Discharge Alarm Output 2 is activated. The count down timer begins. Activation of Input 3 will only Activate Output 2 and then begin the count down timer. When the count down time expires Output 3 activates. When Input 4 is activated Output 4 is activated.</p> <p>Operation of an Abort Switch would stop the time delay count down at 10 seconds and upon release of the Abort Switch, the counter would resume counting down.</p>				Output Circuit							Relays				
				Action	Device	Circuit	Output 1	Output 1	Output 2	Output 3	Output 3	Output 3	Output 3	Output 4	Trouble
Operated	No	Abort Sw.	Sup 1/Abort						●						
Released	No	Abort Sw.	Sup 1/Abort							●					
Open	No	Abort Sw.	Sup 1/Abort								●				
Operates	No	L-P Switch 2	Supv. #2										●		
Open	No	L-P Switch 2	Supv. #2								●				
Alarm	Yes	Detectors	Zone 1	◐	●	●	●					●			◐
Open	No	Detectors	Zone 1								●				
Alarm	Yes	Detectors	Zone 2	◑	●	●	●					●			◑
Open	No	Detectors	Zone 2								●				
Operated	Yes	Man. Rel.	Zone 3			●	●					●			●
Open	No	Man. Rel.	Zone 3								●				
Operates	Yes	Detectors	Zone 4							●		●			
Open	No	Detectors	Zone 4								●				

Program Legend	
●	Both zones active
◐	Either zone active
◑	



SR-X Custom Programming Information

CUSTOM PROGRAM						
OUTPUTS	ZONES					
	SUP 1/ABORT	SUP 2	#1	#2	#3	#4
	*Supervisory or Abort	Supervisory				
#1						
#2						
#3						
#4						



* If SUP 1/Abort zone is programmed as abort, activation of that zone will not operate any output circuits.

Wiring Diagram Custom Program


TO CIRCUIT BREAKER PANEL
120VAC/60Hz
165VA MAX.
220VAC/50Hz
185VA MAX.

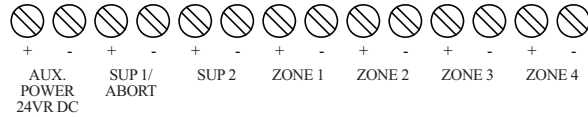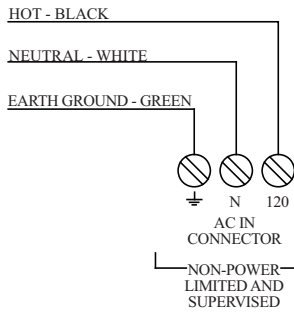

NON-POWER LIMITED AND SUPERVISED

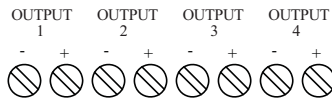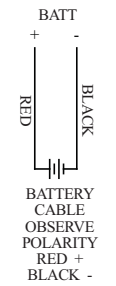

COMMON RELAY CONTACTS
DRY CONTACTS RATED AT 3A, 30VDC RESISTIVE

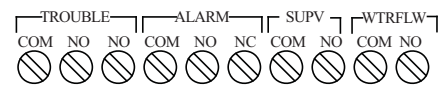

Notes:
1. Polarity marked on output terminals is for an activated (off-normal) condition. Polarity reverses when output is activated.

Amerex SR-X panel Custom Program Information for Water Based Extinguishing Systems

If the user has selected program # 0 for a custom configuration of the panel the following will appear in the display window.

P	R	O	G	R	A	M		T	Y	P	E	:			
W	A	T	E	R		B	A	S	E	D					

This display allows the user to select functions for either water or chemical based extinguishing systems. This window is for water based, to toggle from water based to chemical based or visa versa, press the SELECT (middle) button

SET Press the top button to set the description displayed into the panels program

SELECT Press the middle button to scroll between water or chemical based modes

FUNCTION Press the bottom button to skip to the next function

After setting the WATER BASED mode or pressing FUNCTION, the following will appear in the display:

I	N	I	T		Z	O	N	E	#	1					
D	E	T	E	C	T	I	O	N							

Initiating Zone Description

This allows the user to describe the initiating zones. Nine different descriptions are available. They are:

- 1) DETECTION - These include smoke detectors, pull stations, heat detectors and other devices put on a conventional zone.
- 2) WATERFLOW - Alarms from waterflow zones are non-silenceable
- 3) LINEAR HEAT DETECTION - These use a special wire with a fuseable insulation
- 4) MANUAL RELEASE - Used to override cross zoning and cause instant release
- 5) LOW AIR ALARM – This is for a low air switch used in a double interlock system. Usually cross zoned with a smoke or heat detector. Activation of this zone creates a supervisory condition on the panel but can still operate the release circuit.
- 6) SUPERVISORY - For monitoring any supervisory function as assigned
- 7) TAMPER - For control valve monitoring
- 8) LOW AIR - Used to detect low air pressure
- 9) HIGH AIR - Used to detect high air pressure

The first four descriptions (DETECTION, WATERFLOW, LINEAR HEAT DETECTION and MANUAL RELEASE) are Alarm Zones. When activated, they will put the panel into alarm and operate the appropriate output as well as operating the alarm relay.

The 5th description (LOW AIR ALARM) creates a supervisory condition on the panel but can be used to activate the release circuit. This activates the Supervisory relay not the Alarm relay.

The last four descriptions (SUPERVISORY, TAMPER, LOW AIR and HIGH AIR) are Supervisory Zones. When activated, they will put the panel in a supervisory condition and activate any output described as “SUPERVISORY BELL”. They cannot activate the release circuit

SET Press the top button to set the description displayed.

SELECT Press the middle button to scroll through the nine descriptions.

FUNCTION Press the bottom button to skip to the next function.

After describing all initiating zones or skipping to the next function, the following will appear in the display window:

S	U	P	E	R	V	S	R	Y		1		Z	O	N	E
A	B	O	R	T											

Zone 5 is a supervisory or abort zone and can only be described as SUPERVISORY, TAMPER, LOW AIR or HIGH AIR, or ABORT.

SET Press the SET button to set the description displayed.

SELECT Press the SELECT button to scroll through the four supervisory and abort descriptions.

FUNCTION Press the bottom button to skip to the next function.

Zone 6 is a supervisory zone and can only be described as SUPERVISORY, TAMPER, LOW AIR or HIGH AIR.

SET Press the SET button to set the description displayed.

SELECT Press the SELECT button to scroll through the four supervisory and abort descriptions.

FUNCTION Press the bottom button to skip to the next function.

After describing what the supervisory zone is to be or skipping to the next function, the following will appear in the display window:

O	U	T	P	U	T		#	1							
I	N	D	I	C	A	T	I	N	G						

Output Description

This allows the user to describe the functions of the output circuits. Four descriptions are available:

- 1) ALARM INDICATING - Indicating appliances include bells, horns, strobes and other appliances used to indicate an alarm.
- 2) RELEASING - Releasing appliances include solenoids and other electrically compatible devices.
- 3) SUPERVISORY BELL - Appliances on this circuit are used to indicate the presence of a supervisory condition. Any zone programmed as LOW AIR ALARM, SUPERVISORY, TAMPER, HI AIR or LOW AIR is automatically mapped to this output.
- 4) TROUBLE BELL - Appliances on this circuit are used to indicate the presence of a trouble condition. The user should describe each output circuit in the same manner as the initiating circuit was described by pressing the middle button to select and the top button to set the desired function.

SET Press the top button to set the description displayed.

SELECT Press the middle button to scroll through the descriptions.

FUNCTION Press the bottom button to skip to the next function.

After selecting all four outputs or pressing FUNCTION, the following will be displayed if any outputs have been described as RELEASING:

O	U	T	P	U	T		#	<	a	>	I	N	D		
N	O	R	M	A	L										

Where “<a>” is the number of the releasing circuit output.

Normal/Cross-Zoning

Each releasing circuit can be set up for the normal or cross zoned operation. In NORMAL operation, any alarm initiating zone including LOW AIR ALARM mapped to a releasing output must be in alarm before the output is activated. In cross zoned operation **ALL** initiating zones mapped to the releasing circuit must be in alarm before the output is activated. An initiating zone previously described as “MANUAL RELEASE” will override the cross zoning feature.

SET Press the top button to set the operation displayed.

SELECT Press the middle button to toggle between NORMAL and CROSS ZONED.

FUNCTION Press the bottom button to skip to the next function.

After selecting normal or cross zone operation the next function will be displayed as follows:

A	L		P	R	E	-	D	I	S	C	H	A	R	G	E
	0		S	E	C	O	N	D	S						

Releasing Output Time

This allows the user to determine how long the releasing circuit is energized upon alarm. The available times are 7, 8, 9, 10 and 20 minutes and continuous (Continuous is recommended). Use the middle button to scroll through the possible options and the top button to set that option. Press the bottom button to skip to the next function.

SET Press the top button to set the time displayed.

SELECT Press the middle button to scroll through the available time.

FUNCTION Press the bottom button to skip to the next function.

After choosing the discharge time, a display similar to the following will appear:

Z	O	N	E		1			V							
O	U	T	P	U	T	S	:		1		2		3		4

This display is where the outputs are mapped to the initiating zones. Any output that was previously described as “RELEASING” or “ALARM INDICATING” can be mapped to any initiating zones that were described as alarm zones, including zones programmed as LOW AIR ALARM.

Any initiating zone that was described as supervisory will automatically be mapped to outputs described as “SUPERVISORY BELL”, including zones programmed as LOW AIR ALARM. The “v” is pointing to the first available output for the zone indicated on the display. If the output number is displayed, it is turned on for that zone. If the number is not displayed, it is turned off. If an output is not available for that zone, i.e. “SUPERVISORY BELL”, the “v” will skip to the next available output.

SET Press the top button to set the output to the zone displayed and move to the next available output.

SELECT Press the middle button to turn the output either on or off (the output number will be displayed when turned on).

FUNCTION Press the bottom button to skip to the next function.

After all available outputs for the zone displayed are mapped, the display will automatically change to the next zone. After mapping the last zone or skipping to the next function, the following will appear in the display window:

B	A	N	N	E	R		M	E	S	S	A	G	E	?	

Custom Message

To change the banner message, press the middle button. If you don't want to change the banner message press the bottom button.

SET

SELECT Press the middle button to change banner message.

FUNCTION Press the bottom button to skip to the next function.

If the middle button was pressed, the following will appear in the display window:

^															

The “^” is pointing to the first character on the top line. Press the top button to scroll one direction through the character set, or press the middle button to scroll the other direction. The entire alphabet, numbers and punctuation are included.

SET Press the top button to scroll through the character set in one direction.

SELECT Press the middle button to scroll in the opposite direction.

FUNCTION Press the bottom button to enter the character displayed and to move to the next position.

After programming the top line (maximum 10 characters), continue this process for the bottom line and the initiating zones. To keep the initiating zones as “ZONE 1”, etc., press the bottom button when they are displayed. When finished with the last zone, the following will appear in the display window:

N	E	W		P	A	S	S	W	O	R	D	=	0	0	0
													^		

This allows the user to change the password. All panels are shipped from the factory with a password of 000.

SET Press the top button to set the displayed number and move to the next space.

SELECT Press the middle button to scroll through the numbers.

FUNCTION Press the bottom button to skip this function.

When finished with this section, the following will appear in the display window:

P	U	S	H		P	R	O	G	R	A	M	M	I	N	G
S	W	I	T	C	H		B	A	C	K		U	P		

Quit by returning the programming switch to the left position. The system is now ready for operation.

Amerex SR-X panel Custom Program Information For Chemical Based Extinguishing Systems

If the user has selected program # 0 for a custom configuration of the panel the following will appear in the display window.

P	R	O	G	R	A	M		T	Y	P	E	:			
W	A	T	E	R		B	A	S	E	D					

This display allows the user to select functions for either water or chemical based extinguishing systems. This window is for water based, to toggle from water based to chemical based or visa versa, press the SELECT (middle) button

SET Press the top button to set the description displayed into the panels program

SELECT Press the middle button to scroll between water or chemical based modes

FUNCTION Press the bottom button to skip to the next function

After setting the CHEMICAL BASED mode or pressing FUNCTION, the following will appear in the display:

I	N	I	T		Z	O	N	E		#	1				
D	E	T	E	C	T	I	O	N							

Initiating Zone Description

This allows the user to describe the initiating zones. Nine different descriptions are available. They are:

- 1) DETECTION - These include smoke detectors, pull stations, heat detectors and other devices put on a conventional zone.
- 2) WATERFLOW - Alarms from waterflow zones are non-silenceable
- 3) LINEAR HEAT DETECTION - These use a special wire with a fuseable insulation
- 4) MANUAL RELEASE - Used to override cross zoning and cause instant release
- 5) LOW AIR ALARM – This is for a low air switch used in a double interlock system. Usually cross zoned with a smoke or heat detector. Activation of this zone creates a supervisory condition on the panel but can still operate the release circuit.
- 6) SUPERVISORY - For monitoring any supervisory function as assigned
- 7) TAMPER - For control valve monitoring
- 8) LOW AIR - Used to detect low air pressure
- 9) HIGH AIR - Used to detect high air pressure

The first four descriptions (DETECTION, WATERFLOW, LINEAR HEAT DETECTION and MANUAL RELEASE) are Alarm Zones. When activated, they will put the panel into alarm and operate the appropriate output as well as operating the alarm relay.

The 5th description (LOW AIR ALARM) creates a supervisory condition on the panel but can be used to activate the release circuit, this activates the Supervisory relay not the Alarm relay.

The last four descriptions (SUPERVISORY, TAMPER, LOW AIR and HIGH AIR) are Supervisory Zones. When activated, they will put the panel in a supervisory condition and activate any output described as “SUPERVISORY BELL”. They cannot activate the release circuit

SET Press the top button to set the description displayed.

SELECT Press the middle button to scroll through the nine descriptions.

FUNCTION Press the bottom button to skip to the next function.

After describing all initiating zones or skipping to the next function, the following will appear in the display window:

S	U	P	E	R	V	S	R	Y		1		Z	O	N	E
A	B	O	R	T											

Zone 5 is a supervisory or abort zone and can only be described as SUPERVISORY, TAMPER, LOW AIR or HIGH AIR, or ABORT.

SET Press the SET button to set the description displayed.

SELECT Press the SELECT button to scroll through the four supervisory and abort descriptions.

FUNCTION Press the bottom button to skip to the next function.

S	U	P	E	R	V	S	R	Y	2	Z	O	N	E
S	U	P	E	R	V	I	S	R	Y				

Zone 6 is a supervisory zone and can only be described as SUPERVISORY, TAMPER, LOW AIR or HIGH AIR.

SET Press the SET button to set the description displayed.

SELECT Press the SELECT button to scroll through the four supervisory and abort descriptions.

FUNCTION Press the bottom button to skip to the next function.

After describing what the supervisory zone is to be or skipping to the next function, the following will appear in the display window:

O	U	T	P	U	T	#	1						
I	N	D	I	C	A	T	I	N	G				

Output Description

This allows the user to describe the functions of the output circuits and whether they indicate first or second alarm, or release activated. Four descriptions are available:

- 1) ALARM INDICATING - Indicating appliances include bells, horns, strobes and other appliances used to indicate an alarm. These outputs are also programmable as first or second alarm when in chemical mode. The outputs programmed as first alarm will activate continuously upon activation of any alarm zone mapped to that output. Outputs programmed as second alarm will continue to operate in a continuous mode.

In addition, outputs programmed as –

ON/OFF 2ND ALARM will turn on for the First Alarm, off for the Second.

ON/OFF PD/ON DC will turn on for Alarm, off during a Pre-Discharge and on again during a Discharge.

PUL/ON PD/OFF DC will Pulse 1-second-on/1-second-off for an Alarm, turn on for a Pre-Discharge and off for a Discharge.

ON DISCHARGE will turn on during a Discharge.

PULSE/ON DISCHG will Pulse 1-second-on/1-second-off for Alarm and turn on for a Discharge.

ON/OFF DISCHARGE will turn on for Alarm and off for a Discharge.

- 2) RELEASING - Releasing appliances include solenoids and other electrically compatible devices.

- 3) SUPERVISORY BELL - Appliances on this circuit are used to indicate the presence of a supervisory condition. Any zone programmed as LOW AIR ALARM, SUPERVISORY, TAMPER, HIGH AIR or LOW AIR is automatically mapped to this output.

- 4) TROUBLE BELL - Appliances on this circuit are used to indicate the presence of a trouble condition. The user should describe each output circuit in the same manner as the initiating circuit was described by pressing the middle button to select and the top button to set the desired function.

SET Press the top button to set the description displayed.

SELECT Press the middle button to scroll through the descriptions.

FUNCTION Press the bottom button to skip to the next function.

After selecting an output as INDICATING, a display similar to the following will appear:

O	U	T	P	U	T	#	<	a	>								
N	O	R	M	A	L												

Where “<a>” is the number of the indicating circuit output.

First Or Second Alarm

Each output programmed as INDICATING can be designated to operate on first or second alarm. First alarm is identified as NORMAL, second alarm is identified as 2ND ALARM. Any outputs programmed as INDICATING & NORMAL will operate when the zone they are mapped to is activated. Any output programmed as INDICATING & 2ND ALARM will operate when two or more zones mapped to it are activated. These outputs will operate in a continuous pattern even after the release circuit activates.

In addition to NORMAL and 2ND ALARM, outputs programmed as INDICATING can also be designated to operate as: ON/OFF 2ND ALARM will turn on for the First Alarm, off for the Second.


ON/OFF PD/ON DC will turn on for Alarm, off during a Pre-Discharge and on again during a Discharge.

PUL/ON PD/OFF DC will Pulse 1-second-on/1-second-off for an Alarm, turn on for a Pre-Discharge and off for a Discharge.

ON DISCHARGE will turn on during a Discharge.

PULSE/ON DISCHG will Pulse 1-second-on/1-second-off for Alarm and turn on for a Discharge.

ON/OFF DISCHARGE will turn on for Alarm and off for a Discharge.

 CAUTION
An output programmed as INDICATING & 2 nd ALARM that has only one initiating zone mapped to it will never operate. Likewise, if multiple zones are mapped to that output and only one zone activates, that output will not operate until another zone mapped to it activates.

SET Press the top button to set the description displayed.

SELECT Press the middle button to scroll between NORMAL, 2ND ALARM, , ON/OFF 2ND ALARM, ON/OFF PD/ON DC, PUL/ON PD/OFF DC, ON DISCHARGE, PULSE/ON DISCHG and ON/OFF DISCHARGE.

FUNCTION Press the bottom button to skip to the next function.

After selecting all four outputs or pressing FUNCTION, the following will be displayed if any outputs have been described as RELEASING:

O	U	T	P	U	T	#	<	a	>								
N	O	R	M	A	L												

Where “<a>” is the number of the releasing circuit output.

Normal/Cross-Zoning

Each releasing circuit can be set up for the normal or cross zoned operation. In NORMAL operation, any alarm

initiating zone including LOW AIR ALARM mapped to a releasing output must be in alarm before the output is activated. In cross zoned operation **ALL** initiating zones mapped to the releasing circuit must be in alarm before the output is activated. An initiating zone previously described as “MANUAL RELEASE” will override the cross zoning feature.

SET Press the top button to set the operation displayed.

SELECT Press the middle button to scroll between NORMAL or CROSS ZONED

FUNCTION Press the bottom button to skip to the next function.

After selecting normal or cross zone operation the next function will be displayed as follows:

A	L		P	R	E	-	D	I	S	C	H	A	R	G	E
3	0		S	E	C	O	N	D	S						

Pre-discharge Timer for Alarm Zones

A time delay of 0-60 seconds can be entered to delay the activation of the release circuit. The pre-discharge timer starts when all of the zones necessary for the operation of the release circuit have been activated. Pressing the middle button increases the time delay by one second. Pressing the middle button after 60 seconds is displayed will start the timer over at 0.

SET Press the top button to set the time displayed.

SELECT Press the middle button to increase the time by one second.

FUNCTION Press the bottom button to skip to the next function.

If a zone has not been programmed as MANUAL RELEASE, skip to the next programming step.

If a zone has been programmed as MANUAL RELEASE, the following will appear in the display window after choosing an alarm zone pre-discharge time:

M	D		P	R	E	-	D	I	S	C	H	A	R	G	E
1	0		S	E	C	O	N	D	S						

Pre-Discharge timer for MANUAL RELEASE zones

A time delay of 0-30 seconds can be entered to delay the activation of the release circuit. The pre-discharge timer starts when the manual release zone has been activated. Pressing the middle button increases the time delay by one second. Pressing the middle button after 30 seconds is displayed will start the timer over at 0.

SET Press the top button to set the time displayed.

SELECT Press the middle button to increase the time by one second.

FUNCTION Press the bottom button to skip to the next function.

After choosing an alarm zone pre-discharge time, the following will appear in the display window:

A	B	O	R	T		T	Y	P	E	:					
U	L	I													

Abort Modes

The abort function is used to stop the release circuit from activating. Activation of the abort circuit will create a trouble condition.

ULI – Activation of the abort circuit stops the pre-discharge timer at 10 seconds. If there is less than 10 seconds remaining, the timer goes back to 10 seconds. Releasing the abort button restarts the timer at 10 seconds. Activate again to repeat.


IRI – This mode, only functions if the release circuit is cross zoned. The IRI mode has the same functions as the ULI mode except the abort button must be pressed and held before the second zone necessary for the activation of the release circuit goes into alarm. Activation of the abort after the second alarm is received will have no effect. If the release circuit is not cross zoned, operation of the abort circuit in the IRI mode will not stop the release circuit.

NYC – This mode is not UL listed. This is a one shot function. Activation of the abort circuit will add 90 seconds to the original pre-discharge time. The countdown with the additional 90 seconds will begin when the abort button is released. Pressing the abort button again will have no effect.

30-Second Abort – This mode is not UL listed. Activation of the abort circuit will stop the pre-discharge timer at 30 seconds. If there is less than 30 seconds remaining, the timer goes back to 30 seconds. Releasing the abort button re-starts the timer. Activate again to repeat.

The next function will be displayed as follows:

D	I	S	C	H	A	R	G	E		T	I	M	E		
C	O	N	T	I	N	U	O	U	S						

 WARNING
<p>*The abort zone is a non-latching zone. In order for the abort function to operate, the abort button must be pressed and held continuously. Releasing the abort button will continue the pre-discharge timer.</p> <p>*The abort function will not prevent the activation of the release circuit if a zone programmed as MANUAL RELEASE has been activated. MANUAL RELEASE always overrides the abort function.</p> <p>*The abort function will not prevent the activation of the release circuit if there is no pre-discharge time set or if the pre-discharge time is 1 second or less when the abort button is pressed.</p>

Releasing Output Time

This allows the user to determine how long the releasing circuit is energized upon alarm. The available times are 7, 8, 9, 10, 20 minutes and continuous. Use the middle button to scroll through the possible options and the top button to set that option. Press the bottom button to skip to the next function.

- SET** Press the top button to set the time displayed.
- SELECT** Press the middle button to scroll through the available time.
- FUNCTION** Press the bottom button to skip to the next function.

After a discharge time is entered, a display similar to the following will appear:

Z	O	N	E		1			V							
O	U	T	P	U	T	S	:		1		2		3		4

This display is where the outputs are mapped to the initiating zones. Any output that was previously described as “RELEASING” or “ALARM INDICATING” can be mapped to any initiating zones that were described as alarm zones, including zones programmed as LOW AIR ALARM. Any initiating zone that was described as supervisory will automatically be mapped to outputs described as “SUPERVISORY BELL”, including zones programmed as LOW AIR ALARM. The “v” is pointing to the first available output for the zone indicated on the display. If the output number is displayed, it is turned on for that zone. If the number is not displayed, it is turned off. If an output is not available for that zone, i.e. “SUPERVISORY BELL”, the “v” will skip to the next available output.

SET Press the top button to set the output to the zone displayed and move to the next available output.

SELECT Press the middle button to turn the output either on or off (the output number will be displayed when turned on).

FUNCTION Press the bottom button to skip to the next function.

After all available outputs for the zone displayed are mapped, the display will automatically change to the next zone. After mapping the last zone or skipping to the next function, the following will appear in the display window:

B	A	N	N	E	R		M	E	S	S	A	G	E	?	
C	U	S	T	O	M		M	E	S	S	A	G	E		

To change the banner message, press the top or middle buttons. If you don't want to change the banner message press the bottom button.

If the top or middle button was pressed, the following will appear in the display window:

^															

The “^” is pointing to the first character on the top line. Press the top button to scroll one direction through the character set, or press the middle button to scroll the other direction. The entire alphabet, numbers and punctuation are included.

SET Press the top button to scroll through the character set in one direction.

SELECT Press the middle button to scroll in the opposite direction.

FUNCTION Press the bottom button to enter the character displayed and to move to the next position.

After programming the top line (maximum 10 characters), continue this process for the bottom line and the initiating zones. To keep the initiating zones as “ZONE 1”, etc., press the bottom button when they are displayed.

When finished with the last zone, the following will appear in the display window:

N	E	W		P	A	S	S	W	O	R	D	=	0	0	0
													^		

This allows the user to change the password. All panels are shipped from the factory with a password of 000.

SET Press the top button to set the displayed number and move to the next space.

SELECT Press the middle button to scroll through the numbers.

FUNCTION Press the bottom button to skip this function.

When finished with this section, the following will appear in the display window:

P	U	S	H		P	R	O	G	R	A	M	M	I	N	G
S	W	I	T	C	H		B	A	C	K		U	P		

Quit by returning the programming switch to the left position. The panel is now ready for operation.

Programming Summary

- Examine History Buffer
- Set Time
- Enter Password
- Enable/Disable Initiating Zones
- Enable/Disable Output Zones
- System Mode - Normal/One Man Walktest
- Select Program - #0 thru #9

Custom Program (#0 only)

- Describe Initiating Zones 1 - 4

Alarm Zones

Detection
Waterflow
Linear Heat Detection
Manual Release

Supervisory Zones

Supervisory
Tamper
Low Air
Hi Air
Low Air Alarm

- Describe Initiating Zone 5 (dedicated supervisory)

Supervisory
Tamper
Low Air
Hi Air
Abort

- Describe Initiating Zone 6

Supervisory
Tamper
Low Air

- Describe Output Zones

Alarm Indicating
Releasing
Supervisory Bell
Trouble Bell

- 1) Releasing circuits: normal/cross-zoned
- 2) Discharge time: 7, 8, 9, 10, 20 minutes or

continuous

- Map Alarm Inputs to Outputs
- Put in Banner Message
- Put in Banner Message Bottom Line
- Put Zone Description for Each Initiating Zone
- Change Password
- Finished

Installation Instructions

Read the entire manual before attempting to install this panel

NOTICE

This panel wiring should be installed and maintained in accordance with section 760 (Fire Protection Signaling Systems) and all other applicable sections of the National Electrical Code, all other applicable NFPA Code and Standards, local code and the authority having jurisdiction. Review the circuit parameters listed below before installing the panel.

Canada Installations

CAUTION

This panel wiring should be installed and maintained in accordance with CAN/ULC-S524M, (Standard for the Installation of Fire Alarm Systems), and all other applicable sections of the Canadian Electrical Code, all other applicable NFPA Code and Standards, local code and the authority having jurisdiction. Review the circuit parameters listed below before installing the panel.

NOTICE

All wiring terminals support 14 to 22 AWG wire sizes. 18 AWG stranded or solid copper wire, (or wire size rated for the current carrying capacity of the input and output circuit application), with 300V, 85°C insulation is recommended.

Wire checkout

With all initiating devices and notification appliances installed and with the EOLR's in place, check the wires with an ohmmeter. Meter readings outside of the following will prevent normal operation.


From any wire to ground – more than 100K ohms.

Across the 2 wires on each Initiating zone – between 1.8K ohms and 5.4K ohms.

Across the 2 wires on each notification circuit – between 1.8K ohms and 23.9K ohms.

Mounting Instructions

- 1) The unit should be mounted in a convenient location, approximately 5 ft. from the floor where it will be accessible for testing and servicing.

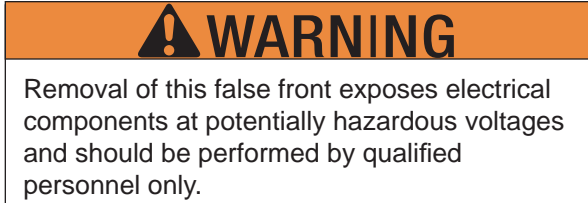

- 2) The main circuit board module should be removed before attempting to mount the cabinet. Disconnect the AC power from TB201. To remove the module, remove the two screws holding the chassis to the cabinet. Lift the module upwards, approximately 1/2", in order to clear the cross-beam of the cabinet on which the module rests. Remove the module and set aside.
- 3) The PFC unit may be surface mounted or semi-flush mounted using the optional trim bezel. (See drawing for installation of bezel on page 61). For semi-flush installations mount the housing so that the front edge protrudes 1" from the finished wall surface. After all conduits and wiring are in place and the wall surface is completely finished, slide the trim bezel in place and fasten with 4 #6-32 x 1/4" machine screws and nuts.
- 4) Install all required conduits, external wiring and devices and make all connections that are external to the panel. Replace the module. With the AC power still turned off at the circuit breaker panel, connect the AC hot, neutral and ground wires to the terminal block TB201 as shown on the connection drawing.
- 5) Connect all the other wiring to the terminals as shown in the connection drawings. Turn the AC power on and connect the standby batteries with the cable provided, polarity must be observed.
- 6) Replace false front panel and secure with mounting screws, taking care to not damage LED annunciator module cable.
- 7) The operation of the complete system should be verified as outlined in the test procedure section.

Power Compatibility

Inactive Circuits

All inactive initiating device circuits and indicating appliance circuits must have the end-of-line resistor on the panel terminal.

Operating Instructions Form

Fill in the name, address and telephone number of the servicing agency on the appropriate instruction sheet provided and frame and place adjacent to control panel at eye level.

Battery Size Calculations

To use Calculation Table:

- 1) List in column #1 all devices used in the system, include all modules, bells, horns, door holders, and smoke detectors (see table #1 or manufacturers specifications).
- 2) List in column #2 the quantity of each device.
- 3) List in column #3 the standby current of each device (exclude all alarm signal indicating devices).
- 4) List in column #5 the alarm current of each device.
- 5) For each line, multiply the figure in column #2 by the figure in column #3 and enter the product in column #4. Then multiply the figure in column #2 by the figure in column #5 and enter the product in column #6.
- 6) Add the figures in columns #3 and #6, enter the sums in the appropriate Total mA box.
- 7) Convert these figures from milliamperes to amperes by multiplying by 0.001, enter the product in the appropriate Total A box.
- 8) Multiply the standby total amperes by required time in hours from table 2.
- 9) Divide the alarm total amperes by 12 (5 mins.).
- 10) Add the standby AH and the alarm AH and divide this sum by 0.85 (efficiency factor). Select a battery that has an AH rating above this figure but not less than 6.5AH.

Battery Size Requirements And Maintenance

These panels require a 24 volt gel-cell battery for proper operation. 24 hours of standby power is required for Local Systems and Central Station (NFPA-72).

The chart below will assist you in selecting the proper size battery: (Does not include LED Annunciator)

No. of Smoke Detectors	No. of Bells (100mA each)	Auxiliary Power Requirements	Standby Hours Required	Battery Size/Part No. (2 Req.)
0-100	0-10	0-25mA	24	8AH/5130084/BT 80
0-100	0-10	0mA	90	12AH/5130090/BT 120
0-100	0-10	0-30mA	90	18AH/5130086/BT 180

NOTICE

Maximum allowed battery size for UL Listings is 12AH. FM and others may require more than 90 hours of standby time and may use larger batteries. Batteries rated above 12AH require a separate battery cabinet (stock number 1000015). Mark the purchase date on the batteries. Test the batteries at least semi annually according to the battery test methods in NFPA72 or the battery manufacturers instructions. Replace the batteries if they either fail the test or after four years of use.

Current Requirements: Table 1

Module/Device	Standby mA*	Alarm mA*
Amerex SR-X panel	121	274

*Add 23 mA plus current requirement of all devices connected for each output programmed as Trouble Bell

**Includes one zone short circuit current.

Secondary Power Supply Requirements: Table 2

Service Use	Standby Time	Alarm Time
NFPA 72 <ul style="list-style-type: none"> • Central Station (PPU) • Local FMRC 1011 and 1012, Deluge and Pre-action Systems Where requested by FM or others. 90 Hours is not a UL requirement.	24 hrs. 24 hrs. 90 hrs.	5 mins. 5 mins. 10 mins.

Calculation Table

1	2	3	4	5	6
Module/Device	Quantity	Standby mA Per Unit	Total Standby Current	Alarm mA Per Unit	Total Alarm Current
		Total mA		Total mA	
		Convert to A	x 0.001	Convert to A	x 0.001
		Total A		Total A	
		Multiply by hours from table 2	x ____	5 min/12 or 10 min/6	÷ ____
		Total Standby AH		Total Alarm AH	
				+ Total Standby AH	
				Total AH	÷ 0.85
				Efficiency Factor	
				Required AH	

Use a battery with a higher AH rating than Required AH

2-Wire Smoke Detector Compatibility Data

Smoke Detector Compatibility Identifier "A"

System Sensor (Brk) (Max. No. Of Detectors Per Zone Is 20)

Det. Model	Identifier	Base Model	Identifier
1400*	A	N/A	N/A
2400*	A	N/A	N/A
2400TH*	A	N/A	N/A
2W-B	A	N/A	N/A
2WT-B	A	N/A	N/A
2WTR-B	A	N/A	N/A

Detection Systems (Max. No. Of Detectors Per Zone Is 25)

Det. Model	Identifier	Base Model	Identifier
DS250	A	MB2W/MB2WL	A
DS250TH	A	MB2W/MB2WL	A
DS250HD	A	MB2W/MB2WL	A

EsI (Max. No. Of Detectors Per Zone Is 25)

Det. Model	Identifier	Base Model	Identifier
611U	S10	601U	S00
611UD	S10	601U	S00
611UT	S10	601U	S00
612U	S10	601U	S00
612UD	S10	601U	S00
613U5	S10	601U	S00
611UD	S10	609U10	S00
612UD	S10	609U10	S00
425C	S10	N/A	N/A
425CT	S10	N/A	N/A

Hochiki (Max. No. Of Detectors Per Zone Is 25)

Det. Model	Identifier	Base Model	Identifier
SLR-24*	HD-3	HSC-221R	HB-71
		HSB-221	HB-54
		HSB-221N	HB-54
		NS6-221	
		NS4-221	
		NS6-220	HB-3
SLR-24H*	HD-3	HSC-221R	HB-71
		HSB-221	HB-54
		HSB-221N	HB-54
		NS6-221	
		NS4-221	
		NS6-221	
SIJ-24*	HD-3	HSC-221R	HB-71
		HSB-221	HB-54
		HSB-221N	HB-54
		NS6-221	
		NS4-221	
		NS6-221	

Fenwal (Max. No. Of Detectors Per Zone Is 25)

Det. Model	Identifier	Base Model	Identifier
CPD-7051*	I51FE1	2-WIRE	FE51A
PSD-7155*	P55FE1	2WRLT	FE52A
PSD-7156*	P56FE1	2WRB	FE55A

All of the above Fenwal detectors and bases can be used in any combination

Retrofit Base Adaptor 70-501000-003, Identifier MAFE1 (for series 70-201000 Bases, Models -001, -002, -003 and -005)
 Duct Housing with Detector Base DH-51, Identifier DH22FE5 (for CPD-7051 and PSD-7155 detectors only)

Potter (Max. No. Of Detectors Per Zone Is 25)

Det. Model	Identifier	Base Model	Identifier
PS-24*	HD-3(HOCHIKI)	SB-46	HB-71(HOCHIKI)
			HB-54(HOCHIKI)
		SB-93	HB-3 (HOCHIKI)
PS-24H	HD-3(HOCHIKI)	SB-46	HB-71(HOCHIKI)
IS-24*	HD-3(HOCHIKI)	SB-46	HB-54(HOCHIKI)
			HB-71(HOCHIKI)
			HB-54(HOCHIKI)

NOTICE

Only one detector can be supported in alarm per zone.

If using a mix of System Sensor and other smoke detectors, a maximum of 20 detectors shall be permitted.

Sync Module Compatibility - Panel is compatible with the following synchronization modules:

Amseco #SMD10-3A, Gentex #AVSM, System Sensor #MDL, Wheelock #DSM12/24

*UL and ULC Listed

Releasing Device Capability

Automatic Water Control Valves Compatibility Data				
Using the Following Solenoids	Devices Per Circuit	Water Valve Manufacturers	Water Valve Designation	Size NPT
ASCO Solenoid Valve Model T8210A107 Model R8210A107 Model 8210A107 24VDC Skinner Solenoid Valve Model 73218BN4UNLVNOC111C2 24VDC	1	Figgie Fire Protection Systems (Formally ASCOA)	Model D and F	2½", 4", 6"
		Grinnell Corp.	Grinnell or Gem Model A-4 Grinnell or Gem Model B Grinnell or Gem Model F445 Grinnell or Gem Model F470	4", 6" 2" 2½" 4", 6"
Skinner Solenoid Valve Model 73218BN4UNLVNOC111C2 24VDC	1	Central Sprinkler	Model A	6"
		Reliable Automatic Sprinkler Co. Inc.	Model A Models B and BX	2½" 4", 6" 100mm, 150mm
		Global Fire Sprinkler Corp.	Model F	2½", 4", 6"
		Star Sprinkler Corp.	Model A Model G	3", 6" 3", 6"
ASCO Solenoid Valve Model T8210A107 Model R8210A107 Model 8210A107 24VDC	1	The Viking Corp.	Model E-1	1½", 2", 3", 4", 6"
FM Approval				
Solenoid Groups		A,B,D,E,F,G,H,I,J,K		
Agent Releasing Systems Compatibility Data				
Manufacturer	Actuator		Voltage	
Fike Protection Systems Division of Fike, Inc.	C85-102 CO2 Solenoid		24VDC	
Fike Protection Systems Division of Fike, Inc.	Interface Firing Module P/N 10-2136*		24VDC	
Janus	FM200 Electric Valve Actuator P/N 18481		24VDC	
Amerex	Electric Actuator 17014		24VDC	
Alarm Indicating Appliance Compatibility Data				
All alarm indicating appliances must be UL Listed, 24VDC devices				

* ULC Listed

NAC Device Compatibility

Manufacturer	Model #	Type of Device	Maximum Devices per Circuit*
Amseco All devices compatible with SMD10-3A	SL24W-1530	Strobe	7 to 11
	SH24W-1530	Horn/Strobe	6 to 9 (Do Not Jumper Horn and Strober)
	MBA 24-6	Bell	16
	MBA 24-8	Bell	16
	MBA 24-10	Bell	16

* Number of devices per circuit will depend on the field selectable candela and audible settings of the device.

Manufacturer	Model #	Type of Device	Maximum Devices per Circuit*
Amseco (continued) All devices compatible with SMD10-3A	MH-12/24	Mini-Horn	66
	HP-25T	Mini-Horn	60
	CSL24W	Strobe	7 to 12 (Not for Evacuation)
	CSL24C	Strobe	4 to 8 (Not for Evacuation)
	CSH24W	Horn/Strobe	6 to 9 (Not for Evacuation)
	CSH24C	Horn/Strobe	3 to 7 (Not for Evacuation)
	H24W	Horn	14
	CM24W	Chime	22
	CSHB24	Horn/Strobe	5 (Not for Evacuation)
	CSLB24	Strobe	6 (Not for Evacuation)
SMD10-3A	Sync Module	1	
Gentex All devices compatible with the AVSM	GEH	Horn	35
	GEC3	Horn/Strobe	3 to 8
	AVSM	Sync Module	1
System Sensor All devices compatible with the MDL	H SERIES	Horn	14
	S SERIES	Strobe	3 to 6
	MH Series	Mini-Horn	12
	SSM24-6	Bell	18
	SSM24-8	Bell	18
	SSM24-10	Bell	18
	MDL	Sync Module	1
Wheelock All device are compatible with the DSM	RSS/RSSP	Strobe	11
	AS-241575	Horn/Strobe	6
	AS-24MCW	Horn/Strobe	3 to 11
	AS-24MCWH	Horn/Strobe	2
	NS-24MCW	Horn/Strobe	4 to 15
	NS-241575	Horn/Strobe	9
	NS-24MCC/MCCH	Horn/Strobe	2 to 14
	MT-241575	Horn/Strobe	3 to 11
	MT-24MCW	Horn/Strobe	3 to 11
	AMT-241575	Horn/Strobe	4 to 9
	AMT-24MCW	Horn/Strobe	3 to 12
	AMT 12/24	Horn	8 to 17
	NH-12/24	Horn	22 to 55
	HS-24	Horn	37
	HS4-241575	Horn/Strobe	5 to 8
	HS4-24MCW	Horn/Strobe	3 to 11
	HS4-24MCC	Horn/Strobe	2 to 10
	MT-12/24	Horn	16 to 66
	AH-24	Horn	12 to 47
	MIZ	Mini-Horn	38
ASWP	Horn/Strobe	6	
DSM	Sync Module	1	


* Number of devices per circuit will depend on the field selectable candela and audible settings of the device.

Wire Routing for SR-X panel




(*Shown with false front removed)

Using the cabling provided, route all other wiring away from power input wiring.

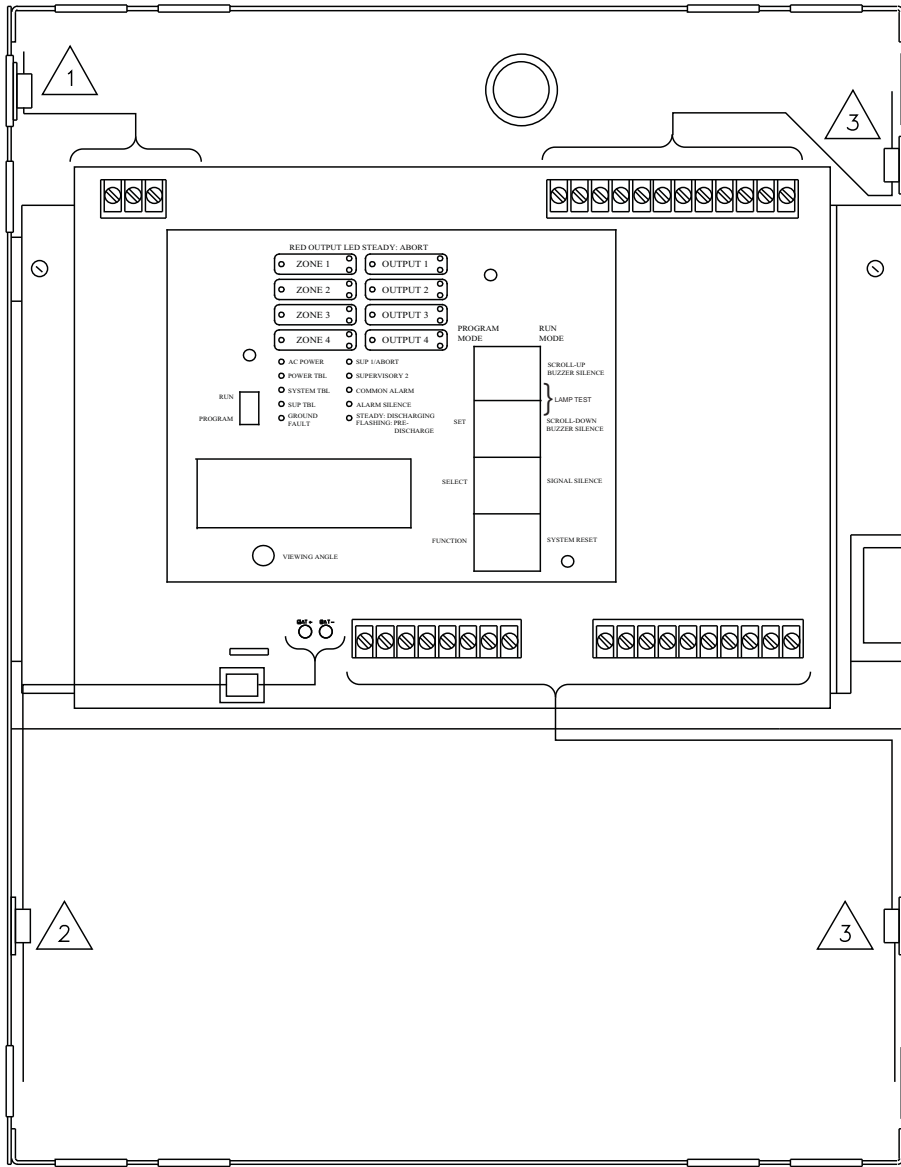All field installed wiring connected to this panel must maintain a spacing of 1/4" between all electric light, power, class 1 or non-power limited fire protective signaling conductors.



DWG# 3550-16

-  1 Power inputs
-  2 Battery leads
-  3 Using the cable clamps provided, route all other wiring away from power input wiring.

NOTICE

All field installed wiring connected to this panel must maintain a spacing of 1/4" between all electric light, power, class 1 or non-power limited fire protective signaling conductors.

NOTICE

NEC Section 760-54

Installation of Conductors and Equipment.

- (a) Separation from Electric Light, Power, Class 1, and NPLFA Circuit Conductors.
- (1) In Cables, Compartments, Enclosures, Outlet Boxes, or Raceways. Power-limited circuit conductors shall not be placed in any cable, compartment, enclosure, outlet box, raceway, or similar fitting containing conductors of electric light, power, Class 1, or non power-limited fire alarm circuit conductors.

Exception No. 1: Where the conductors of electric light, power, Class 1, or non power-limited fire alarm circuit conductors are separated by a barrier from the power-limited fire alarm circuits. In enclosures, power-limited fire alarm circuits shall be permitted to be installed in a raceway within the enclosure to separate them from Class 1, electric light, power, and non power-limited fire alarm circuits.

Exception No. 2: Conductors in compartments, enclosures, device boxes, outlet boxes, or similar fittings, where electric light, power, Class 1, or non power-limited fire alarm circuit conductors are introduced solely to connect to the equipment connected to power-limited circuits to which the other conductors are connected, and

- a. The electric light, power, Class 1, and non power-limited fire alarm circuit conductors are routed to maintain a minimum of 0.25 in. (6,35mm) separation from the conductors and cables of power-limited fire alarm circuits, or
- b. The circuit conductors operate at 150 volts or less to ground and also comply with one of the following:

1. The fire alarm power-limited circuits are installed using Types FPL, FPLR, FPLP or permitted substitute cables, provided these power-limited cable conductors extending beyond the jacket are separated by a minimum of 0.25 in. (6,35mm) or by a non-conductive sleeve or non-conductive barrier from all other conductors, or

2. The fire alarm power-limited circuit conductors are installed as non power-limited fire alarm circuits in accordance with Section 760-25.

Exception No. 3: Conductors entering compartments, enclosures, device boxes, outlet boxes, or similar fittings, where electric light, power, Class 1, or non power-limited fire alarm circuit conductors are introduced solely to connect to the equipment connected to power-limited fire alarm circuits or to other circuits controlled by the fire alarm system to which the other conductors in the enclosure are connected. If the conductors must enter an enclosure that is provided with a single opening, they shall be permitted to enter through a single fitting (such as a tee) provided the conductors are separated from the conductors of the other circuits by a continuous and firmly fixed nonconductor, such as flexible tubing.

Connection Procedure for Battery Charging Current and Voltage

- 1) To measure the battery charging voltage:
Place a voltmeter across the battery terminals as shown in FIG. 4
- 2) To measure the battery charging current:
Place a current meter in series with the battery terminals as shown in FIG. 5.

Fig. 1



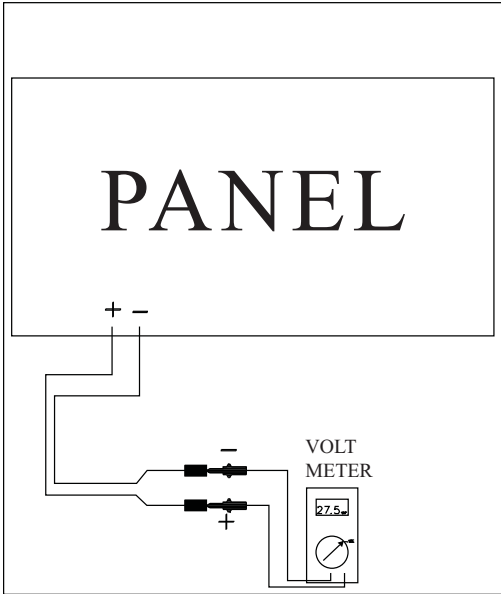


Fig. 2

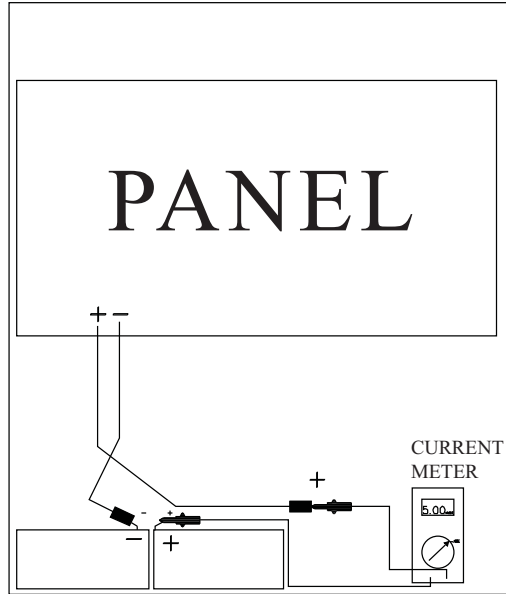

DWG# 3527-9

Installation of Bezel for Semi-Flush Installations

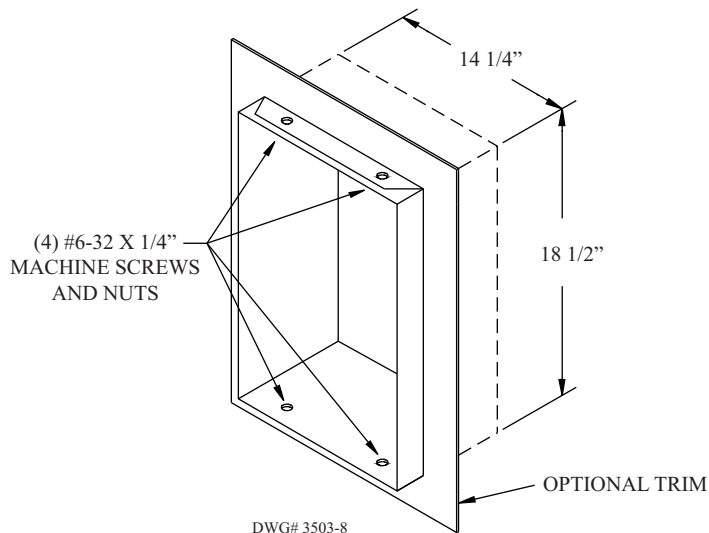

Annex A: 4-Wire Smoke Detectors/Devices

Smoke Detector	Detector Type	Standby Current (mA)	Alarm Current (mA)
Potter PS-24*	Photoelectric	.045	150
Potter PS-24H*	Photoelectric/Heat	.045	150
Potter IS-24*	Ionization	.040	150
DSD-P	Photoelectric Duct	.390	8
Hochiki SLR-835*	Photoelectric	.055	150
Hochiki SLR-835H	Photoelectric/Heat	.045	150
Hochiki SLR-24V*	Photoelectric	.045	150
Hochiki SLR-24VN*	Photoelectric	.045	150
Hochiki SIJ-24*	Ionization	.040	150
Hochiki DCD-135/190	Heat	.040	150
Hochiki DH-98	Photoelectric Duct	.390	8
Hochiki SPB-24	Beam	.25	**
Fenwal CPD-7021 (w/70-201000-005 base)	Ionization	0.10	**
Fenwal PSD-7125	Photoelectric	0.10	**
Fenwal PSD-7126 (w/70-201000-005 base)	Photoelectric	0.10	**
Gentex 824	Photoelectric	0.50	**
Gentex 824T	Photoelectric	0.50	**
Gentex 824CP	Photoelectric	0.50	**
Gentex 824CPT	Photoelectric	0.50	**
System Sensor B112LP	Base	0.12	36
System Sensor B114LP	Base	**	**
System Sensor B404B	Base	**	**
System Sensor DH100ACDC	Photoelectric	0.15	0.70
System Sensor DH100ACDCLP	Photoelectric	0.15	0.70
System Sensor DH100ACDCLWP	Photoelectric	0.15	0.70
System Sensor DH400ACDCI	Ionization Duct	25	95
System Sensor DH400ACDCP	Photoelectric Duct	25	95
System Sensor 1112/24/D	Ionization	0.05	50
System Sensor 1424	Ionization	0.10	41
System Sensor 1451 (w/B402B base)	Ionization	0.10	39
System Sensor 2112/24ATR	Photoelectric	0.50	60/70
System Sensor 2112/24AITR	Photoelectric	0.50	60/70
System Sensor 2112/24/D	Photoelectric	0.05	50
System Sensor 2112/24R	Photoelectric	0.50	60/70
System Sensor 2112/24TR	Photoelectric	0.50	60/70
System Sensor 2112/24T/D	Photoelectric w/135° thermal	0.05	50
System Sensor 2112/24TSRB	Photoelectric w/135° thermal	15	45
System Sensor 2312/24TB	Photoelectric	0.12	50
System Sensor 2424	Photoelectric	0.10	41

System Sensor 2424TH	Photoelectric	0.10	41
System Sensor 2451	Photoelectric	0.10	39
System Sensor 2451TH (w/B402B base)	Photoelectric	0.10	39
System Sensor 2W-MOD	Loop test/maint. mod.	30	50
System Sensor 4W-B (12/24V)	Photoelectric	.05	23
System Sensor 4WT-B (12/24V)	Photoelectric I w/therm	.05	23
System Sensor 4WTA-B (12/24V)	I Photo w/therm/sounder	.05	35
System Sensor 4WTR-B (12/24V)	I Photo w/therm/relay	.05	35
System Sensor 4WTAR-B (12/24V)	I Photo w/therm/sounder/relay	.05	50
System Sensor 4WITAR-B (12/24V)	I Photo w/isolated therm/sounder/relay	.05	50
System Sensor 2WMOD2	I Loop test/maint. mod.	.05	**
System Sensor RRS-MOD	I Reversing relay/sync module	.05	**
System Sensor 6424	Projected beam	10	28.4
System Sensor Beam 1224(S)	Projected beam	17	38.5
* Using Hochiki base HSC-4R			
**NOTE: Contact manufacturer for current draws			

**Connection Drawing for Central Station and Remote Station Operation
SR-X to any UL listed Digital Alarm Communicator Transmitter (DACT)**

